



**ROHDE & SCHWARZ**

Test and Measurement  
Division

## Operating Manual

# FM Measurement Demodulator for FSP FS-K7

1141.1796.02

Printed in the Federal  
Republic of Germany



## **Tabbed Divider Overview**

### **Data Sheet**

**Safety Instructions**  
**Certificate of Quality**  
**Address of Support Center**  
**List of R&S Representatives**

### **Tabbed Divider**

- |          |  |
|----------|--|
| <b>1</b> | <b>Chapter 1: Introduction</b>                   |
| <b>2</b> | <b>Chapter 2: Settings of the FM Demodulator</b> |
| <b>3</b> | <b>Chapter 3: Remote Control</b>                 |
| <b>4</b> | <b>Chapter 4: Index</b>                          |





**ROHDE & SCHWARZ**

Test and Measurement  
Division

## Operating Manual

# FM Measurement Demodulator for FSP FS-K7

1141.1796.02

Printed in the Federal  
Republic of Germany



## **Tabbed Divider Overview**

### **Data Sheet**

**Safety Instructions**  
**Certificate of Quality**  
**Address of Support Center**  
**List of R&S Representatives**

### **Tabbed Divider**

- |          |  |
|----------|--|
| <b>1</b> | <b>Chapter 1: Introduction</b>                   |
| <b>2</b> | <b>Chapter 2: Settings of the FM Demodulator</b> |
| <b>3</b> | <b>Chapter 3: Remote Control</b>                 |
| <b>4</b> | <b>Chapter 4: Index</b>                          |





## Contents – Chapter 1 "Introduction"

<b>1</b>	<b>Introduction .....</b>	<b>1.1</b>
	<b>Circuit Description - Block Diagrams .....</b>	<b>1.1</b>
	<b>Further Characteristics .....</b>	<b>1.3</b>
	IF Bandwidth.....	1.3
	Demodulation Bandwidth.....	1.3
	AF Trigger.....	1.4
	Stability of Measurement Results .....	1.4

### Figures

Fig 1-1	Block diagram of analyzer signal processing .....	1.1
Fig 1-2	Block diagram of software demodulator .....	1.2
Fig 1-3	Residual FM as a function of demodulation bandwidth .....	1.4



# 1 Introduction

The following chapters describe the new operating functions of the FM demodulator option for Spectrum Analyzer FSP. In the case of functions identical to those of the base unit, reference is made to the relevant chapter in the base unit manual.

The digital signal processing in FSP, used in the analyzer mode for digital IF filters, is also ideally suited for demodulating FM or AM signals.

By sampling (digitization) already at the IF and digital downconversion to the baseband (I/Q), the demodulator achieves maximum accuracy and temperature stability. There is no evidence of typical errors of an analog downconversion and demodulation like AM  $\leftrightarrow$  FM conversion, deviation error, frequency response or frequency drift at DC coupling. Only the characteristics of the analog IF filter ahead of the A/D converter need to be taken into consideration.

## Circuit Description - Block Diagrams

Fig 1-1 Block diagram of analyzer signal processing shows the analyzer's hardware from the IF to the processor. The IF filter is the resolution filter of the spectrum analyzer, with a bandwidth range from 300 kHz to 10 MHz. The A/D converter samples the IF (20.4 MHz) at 32 MHz.

Lowpass filtering and reduction of the sampling rate follow the downconversion to the complex baseband. The decimation depends on the selected demodulation bandwidth. The output sampling rate is set in powers of 2 between 15.625 kHz and 32 MHz. Useless oversampling at narrow bandwidths is avoided, saving computing time and increasing the maximum recording time.

The I/Q data is stored in memories each comprising 128 k words. The hardware triggering (external, IF power) controls the memory.

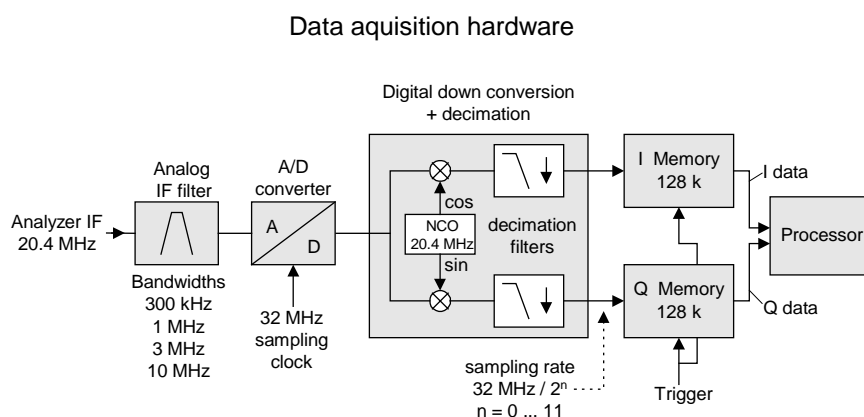


Fig 1-1 Block diagram of analyzer signal processing

The software demodulator runs on the main processor of the analyzer. The demodulation process is shown in Fig 1-2 Block diagram of software demodulator. All calculations are performed simultaneously with the same I/Q data set. Magnitude (= amplitude) and phase of the complex I/Q pairs are determined. The frequency result is obtained from the differential phase.

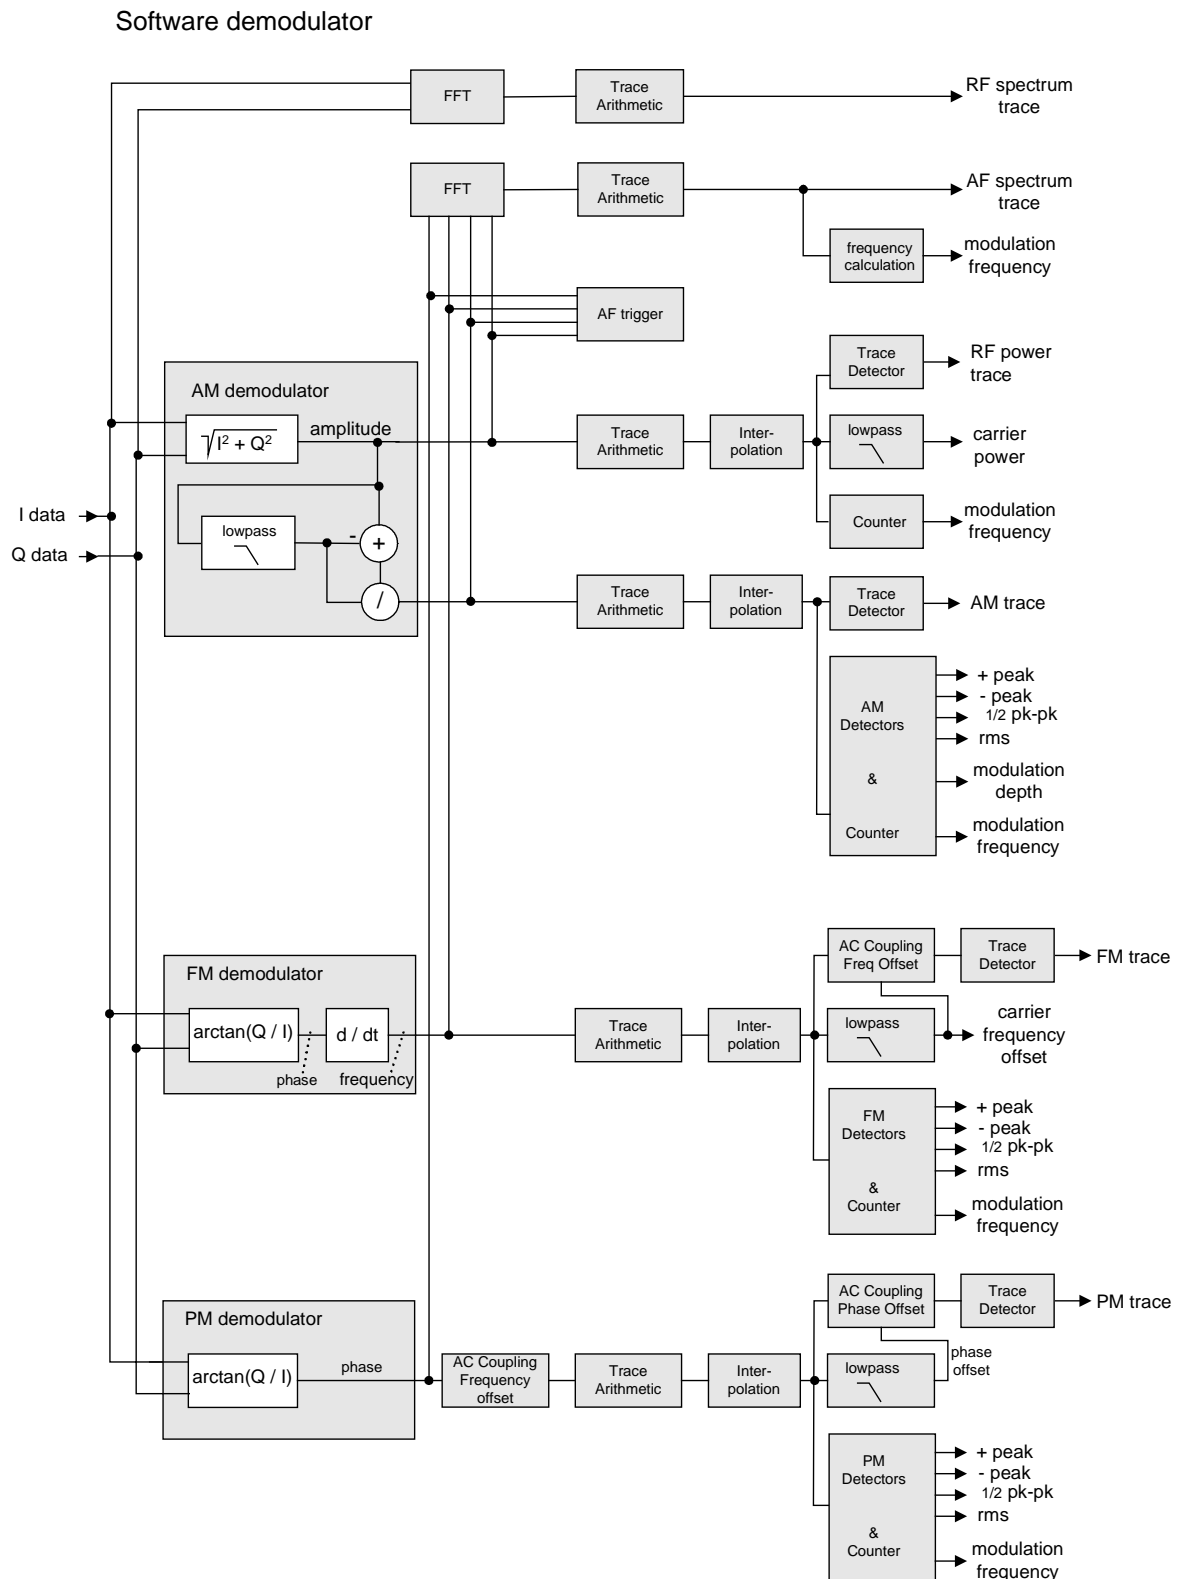


Fig 1-2 Block diagram of software demodulator

The AM-DC, PM-DC and FM-DC raw data of the demodulators is fed into the **trace arithmetic** block that combines consecutive data sets. Possible functions are: Clear Write, Max Hold, Min Hold and Average. The output data of the trace arithmetic can be read via **GPIB**. The recording length corresponds to the selected sampling rate of 1 to 128 k samples.

501 samples are required for on-screen display. If less data is recorded, the missing intermediate values are calculated by an **interpolation filter**.

If more than 501 samples are recorded, the interpolator becomes ineffective. In this case the **trace detector** reduces the number of samples to 501.

The trace detector combines several samples according to the functions selectable: Sample, Max Peak, Min Peak, Average, Autopeak, RMS. The **zoom** function does not combine any samples, but selects a sequence of 501 samples from the data set.

The data from the trace detector is displayed on the screen and can be read out via GPIB. They display level, phase versus time and/or frequency versus time.

In addition, important parameters are calculated:

- A **counter** determines the **modulation frequency** for AM, PM and FM.
- A **lowpass filter** suppresses the modulation frequency; the result is the average power = **carrier power** with AM and the average frequency = **carrier frequency offset** with FM. The deviation from the selected center frequency is displayed.
- **AC coupling** is possible with FM and PM display. To this end, the carrier frequency offset is subtracted from the FM DC data. In addition, the **frequency deviation** is determined from the trace data. +Peak, -Peak, ½ Peak-Peak and RMS are displayed.

Besides the demodulators, the spectrum of the I/Q data, the FM, the PM or the AM is calculated using FFT. The spectrum always comprises 501 samples.

## Further Characteristics

### IF Bandwidth

The **analog IF filter** improves the selectivity, but also causes signal distortions. The filter is negligible if:

$$\text{IF bandwidth} \geq 10 \times (\text{modulation frequency} + \text{frequency deviation})$$

**Note:** *IF bandwidths  $\leq 3$  MHz ensure sufficient image-frequency rejection. If due to a wide signal bandwidth an IF bandwidth of 10 MHz has to be selected, signals are not allowed to be in the range from 6 MHz to 9 MHz above the receive frequency because they will be convoluted back into the useful band of 10 MHz.*

### Demodulation Bandwidth

**Digital filters** determine the demodulation bandwidth. This is not the 3 dB bandwidth but the useful bandwidth which is distortion-free with regard to phase and amplitude.

Therefore the following formulas apply:

- AM: demodulation bandwidth  $\geq 2 \times$  modulation frequency
- FM: demodulation bandwidth  $\geq 2 \times$  (frequency deviation + modulation frequency)
- PM: demodulation bandwidth  $\geq 2 \times$  modulation frequency \* (1 + phase deviation)

**Note:** *If the center frequency of the analyzer is not set exactly to the signal frequency, the demodulation bandwidth must be selected larger by the carrier offset, in addition to the requirement described above. This also applies if FM or PM AC coupling has been selected.*

In general, the demodulation bandwidth should be as narrow as possible to improve the S/N ratio. The residual FM caused by noise floor and phase noise increases dramatically with the bandwidth, especially with FM (Fig 1-3 Residual FM as a function of demodulation bandwidth).

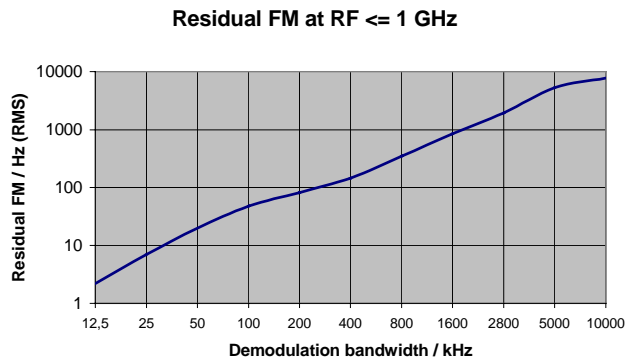


Fig 1-3 Residual FM as a function of demodulation bandwidth

## AF Trigger

The FM demodulator option allows triggering to the demodulated signal. The display is stable if a minimum of five modulation periods are within the recording time.

In the AM and FM display, triggering is always DC-coupled. In the PM display, triggering is either AC- or DC-coupled, depending on the type of coupling set. Therefore triggering is possible directly to the point where a specific carrier level, phase or frequency is exceeded or not attained. This is particularly helpful when measuring transients if no external trigger signal is available.

## Stability of Measurement Results

Despite amplitude and frequency modulation, the display of carrier power and carrier frequency offset is stable.

This is achieved by a digital filter which sufficiently suppresses the modulation, provided, however, that the measurement time is  $\geq 3 \times 1 / \text{modulation frequency}$ , i.e. that at least three periods of the AF signal are recorded.

The mean carrier power for calculating the **AM** is also calculated with a digital filter that returns stable results after a measurement time of  $\geq 3 \times 1 / \text{modulation frequency}$ , i.e. at least three cycles of the AF signal must be recorded before a stable AM can be shown.

## Contents – Chapter 2 "Settings"


<b>2</b>	<b>Settings of the FM Demodulator .....</b>	<b>2.1</b>
	<b>FM Demodulator Main Menu .....</b>	<b>2.2</b>
	Selection of Display Mode – <i>RESULT DISPLAY</i> Menu .....	2.5
	Scaling of Measurement Results – <i>RANGE</i> Menu .....	2.11
	Scaling Functions for <i>FM</i> , <i>PM</i> and <i>AM</i> Result Display .....	2.11
	Scaling Functions for Result Displays with Level Display .....	2.14
	<b><i>FREQ</i> Key .....</b>	<b>2.15</b>
	<b><i>SPAN</i> Key .....</b>	<b>2.16</b>
	<b><i>AMPT</i> Key .....</b>	<b>2.18</b>
	<b><i>BW</i> Key .....</b>	<b>2.19</b>
	<b><i>TRIG</i> Key .....</b>	<b>2.21</b>
	<b><i>MKR</i> Key .....</b>	<b>2.24</b>
	<b><i>MKR</i> ⇒ Key .....</b>	<b>2.25</b>
	<b><i>MKR FCTN</i> Key .....</b>	<b>2.26</b>
	<b><i>MEAS</i> Key .....</b>	<b>2.27</b>
	<b>Other Keys .....</b>	<b>2.27</b>






## 2 Settings of the FM Demodulator

The *FM DEMOD* hotkey opens the menu for setting the FM demodulator functions. Simultaneously, the FM demodulator is activated.

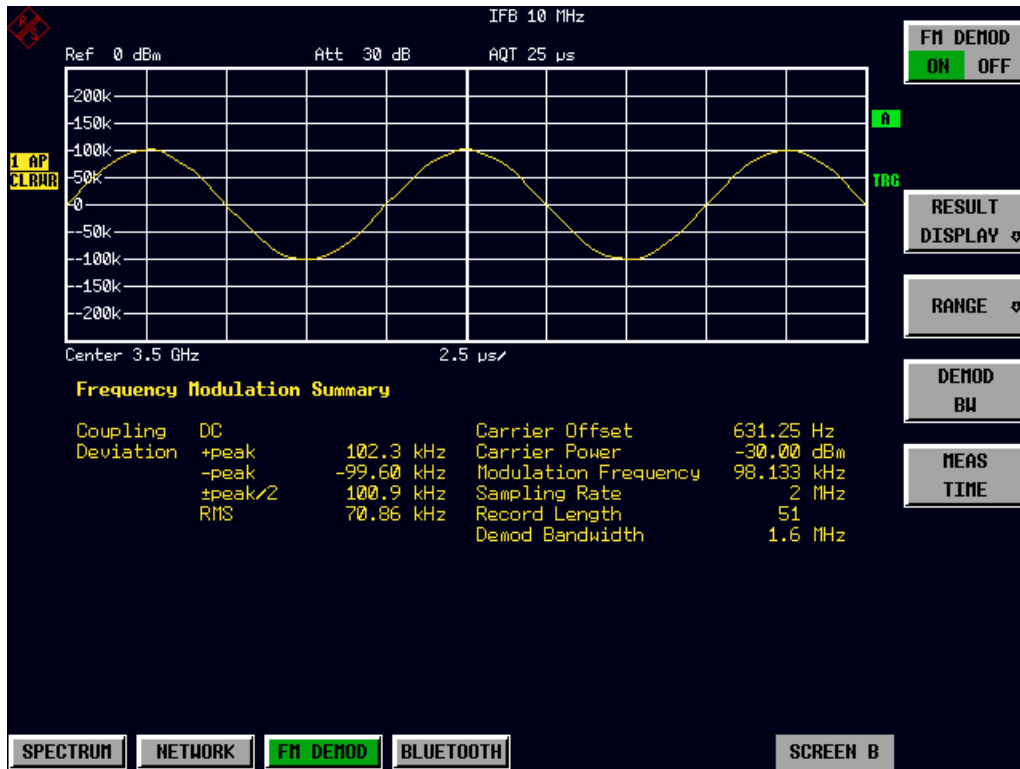


# FM Demodulator Main Menu

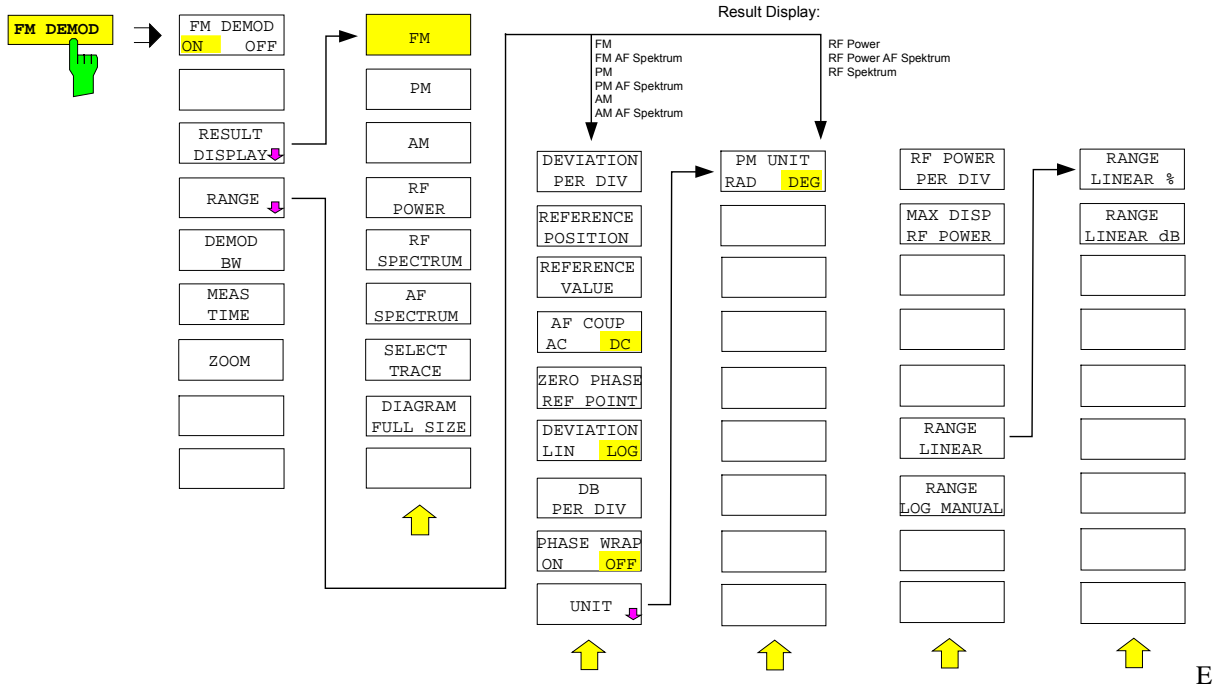

INBETTEN

**Note:** The softkeys visible in the RANGE submenu depend on the selected measurement function (FM / PM / RF SPECTRUM / AF SPECTRUM).

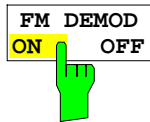


The FM DEMOD ON / OFF softkey switches the FM demodulator on or off. The FM demodulator default setting is OFF; however, when the FM DEMOD mode is selected, the demodulator is switched on automatically.


**Notes:**

- The resolution bandwidth, video bandwidth and sweep time active before the demodulator is switched on are restored when the demodulator is switched off.
- Similarly, the trace operating mode and detector are restored (the FM demodulator has separate trace settings).


```
IEC/IEEE-bus command      INST:SEL ADEM
                          INST:NSEL 3
```

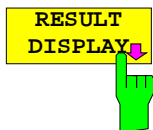

The RESULT DISPLAY softkey opens the submenu for selecting the measurement function required (see chapter "Selection of Display Mode - RESULT DISPLAY Menu").

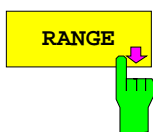

The RANGE softkey opens the submenu for setting the display range of the measurement function selected (see chapter "Scaling of Measurement Results - RANGE Menu").

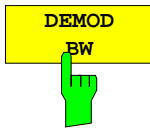

The demodulation bandwidth of the FM demodulator is selected using the *DEMOD BW* softkey. The demodulation bandwidth determines the sampling rate for recording the signal to be analyzed.


The following table shows the relation between demodulation bandwidth and sampling rate:

Demodulation bandwidth	Sampling rate	Comment
120 MHz	256 MHz	with FSQ-B72 only
50/85 MHz <sup>(1)</sup>	128 MHz	with FSQ-B72 only
30 MHz	64 MHz	with FSQ only
18 MHz	32 MHz	with FSQ only
10 MHz	32 MHz	
8 MHz	16 MHz	
5 MHz	8 MHz	
3 MHz	4 MHz	
1.6 MHz	2 MHz	
800 kHz	1 MHz	
400 kHz	500 kHz	
200 kHz	250 kHz	
100 kHz	125 kHz	
50 kHz	62.5 kHz	
25 kHz	31.25 kHz	
12.5 kHz	15.625 kHz	
6.4 kHz	7.8125 kHz	
3.2 kHz	3.90625 kHz	
1.6 kHz	1.953125 kHz	
800 Hz	976.5625 Hz	
400 Hz	488.28125 Hz	
200 Hz	244.140625 Hz	
100 Hz	122.0703125 Hz	

(1) The demodulation bandwidth at a sampling rate of 128 MHz depends on the center frequency that has been set. At a center frequency of  $\leq 3.6$  GHz, the demodulation bandwidth is 50 MHz; at higher center frequencies, it is 85 MHz.

IEC/IEEE-bus command


SENS : BAND : DEM 10MHz

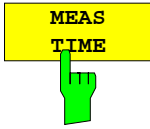

The *MEAS TIME* softkey opens an editor for entering the measurement time of the FM demodulator. The permissible value range depends on the demodulation bandwidth selected.

Demodulation bandwidth	Min. measurement time	Max. measurement time with AF trigger	Max. measurement time with other trigger
120 MHz	3.90625 ns	425 μs	510 μs
50 / 85 MHz	7.8125 ns	850 μs	1.0 ms
30 MHz	15.625 ns	1.7 ms	2.0 ms
18 MHz	31.25 ns	3.4 ms	4.1 ms
10 MHz	31.25 ns	3.4 ms	4.1 ms
8 MHz	62.5 ns	6.8 ms	8.2 ms
5 MHz	125 ns	13.6 ms	16.3 ms
3 MHz	250 ns	27.2 ms	32.6 ms
1.6 MHz	500 ns	54.4 ms	65.3 ms
800 kHz	1 μs	109 ms	131 ms
400 kHz	2 μs	218 ms	261 ms
200 kHz	4 μs	435 ms	522 ms
100 kHz	8 μs	870 ms	1.04 s
50 kHz	16 μs	1.74 s	2.09 s
25 kHz	32 μs	3.48 s	4.18 s
12.5 kHz	64 μs	6.96 s	8.36 s
6.4 kHz	128 μs	13.9 s	16.7 s
3.2 kHz	256 μs	27.8 s	33.4 s
1.6 kHz	512 μs	55.7 s	66.8 s
800 Hz	1.024 ms	111 s	133 s
400 Hz	2.048 ms	222 s	267 s
200 Hz	4.096 ms	445 s	534 s
100 Hz	8.192 ms	891 s	1069 s

IEC/IEEE-bus command      SENS:ADEM:MTIM 62.5US  
 SENS:SWE:TIME 62.5US

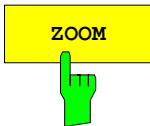

In many cases, the number of recorded test points exceeds by far the number of available pixels. Therefore several test points are combined to one pixel if the *ZOOM* function is inactive.


If the *ZOOM* function is activated, a 1-to-1 allocation is selected, i.e. each pixel corresponds to a recorded test point. The start of the zoom window can be determined in the associated field by entering the time.

The zoom function is not available if the number of test points falls below the number of pixels in the diagram (FSP:501, FSU/FSQ: 625).

IEC/IEEE-bus command      SENS:ADEM:ZOOM ON  
 SENS:ADEM:ZOOM:START 30US

### Selection of Display Mode – *RESULT DISPLAY* Menu


In order to display the measurement results the screen is divided in two halves: In the upper half, the measurement results are displayed as a trace, in the lower half the results of additional evaluation functions are shown. The *RESULT DISPLAY* softkey allows the user to select the measurement results to be displayed.

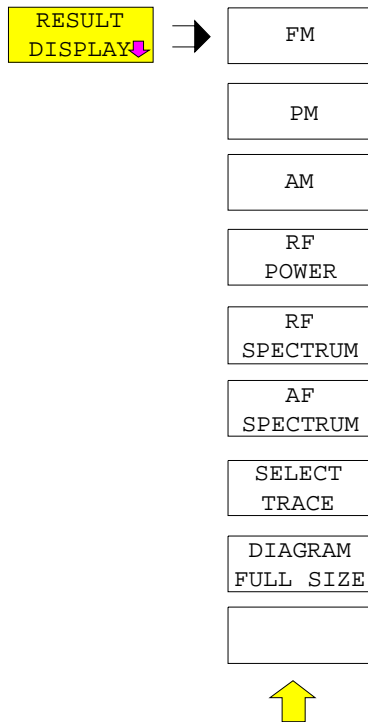


The *RESULT DISPLAY* softkey opens a submenu for selecting the measurement result to be displayed.

The demodulated FM, PM or AM signal, the RF signal in the time domain or the RF or AF frequency spectrum determined via FFT can be selected for display.

All displays are determined from the I/Q data set recorded for the measurement. In *SINGLE SWEEP* mode, the single data set recorded can be evaluated in all displays simply by switching the result display.

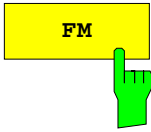


The *FM* softkey selects the demodulated FM signal for display. Depending on the *AF COUPLING AC/DC* selection in the *RANGE* menu, the average value of the demodulated signal is mapped onto the vertical center of the diagram (*AC* selected) or deviates from the center of the diagram by a signal-dependent frequency offset (*DC* selected).

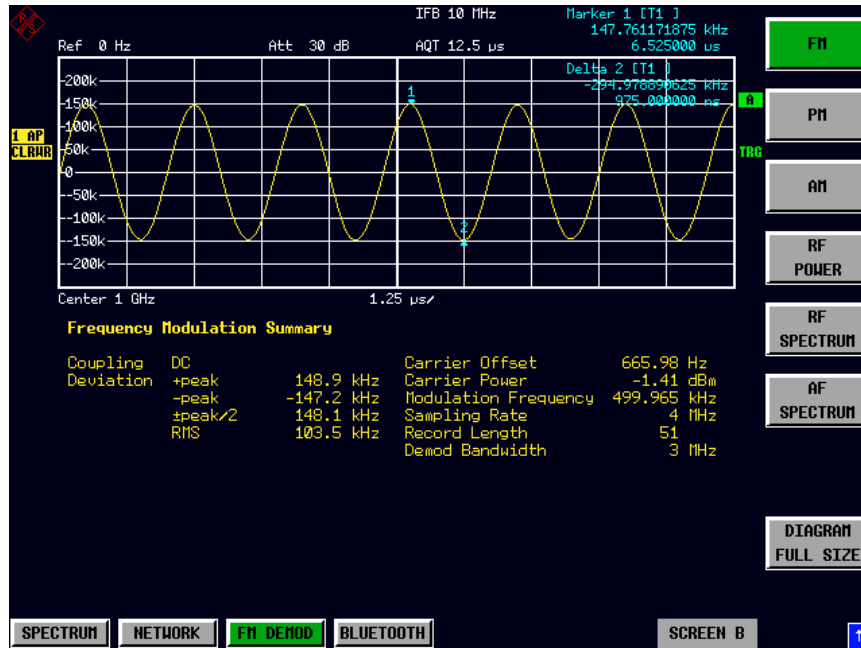


In *SINGLE SWEEP* mode, the data is determined from the current I/Q data set, i.e. a change to FM does not trigger a new measurement.

IEC/IEEE-bus command      `CALC:FEED 'XTIM:FM'`

EINBETTEN

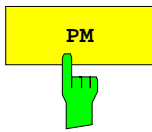


The *PM* softkey selects the display of the demodulated PM signal.

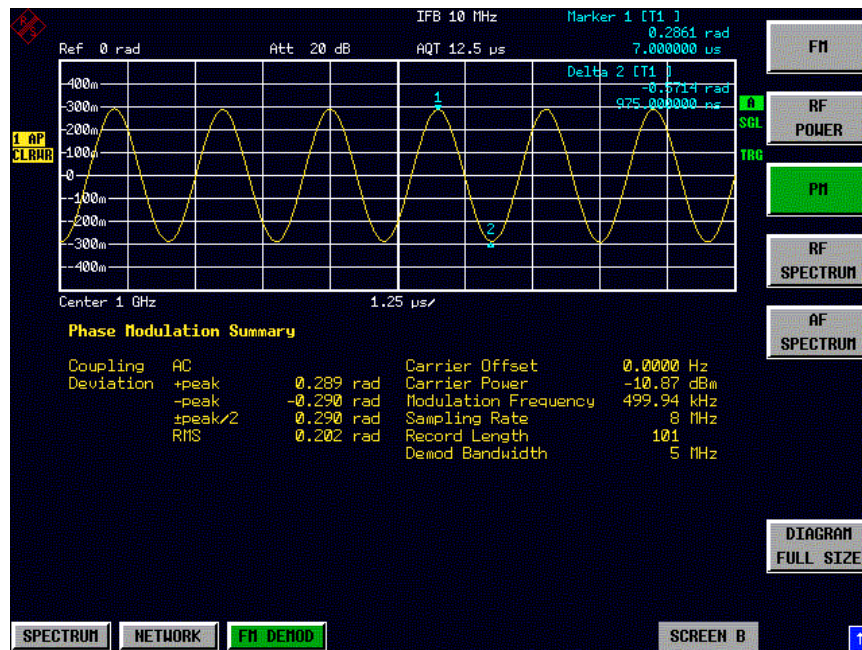


In *SINGLE SWEEP* mode, the data is determined from the current I/Q data set, i.e. a change to *PM* does not trigger a new measurement.

IEC/IEEE-bus command    `CALC:FEED 'XTIM:PM'`

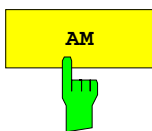


The *AM* softkey selects the display of the demodulated AM signal.

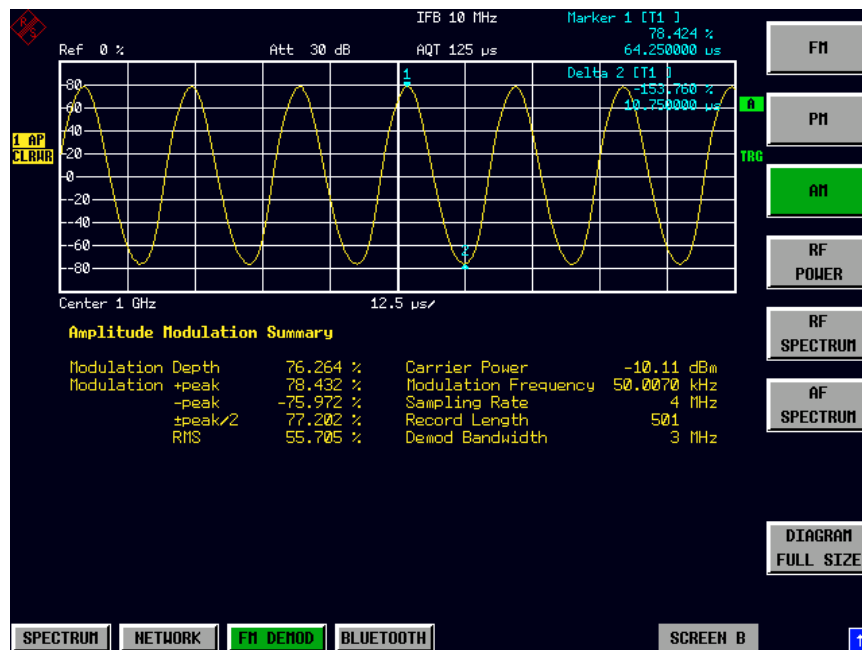


In *SINGLE SWEEP* mode, the data is determined from the current I/Q data set, i.e. a change to *AM* does not trigger a new measurement.

IEC/IEEE-bus command    `CALC:FEED 'XTIM:AM:REL'`

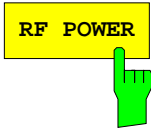


The *RF POWER* softkey selects the display of the RF signal in the time domain. In contrast to normal analyzer operation, the level values are determined from the recorded I/Q data set by means of summation.

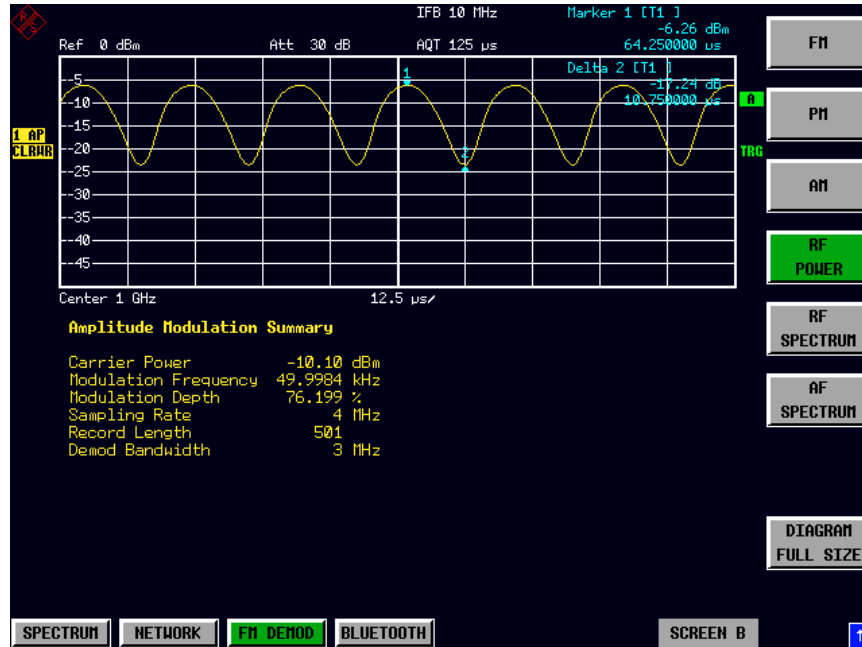


In *SINGLE SWEEP* mode, the data is determined from the current I/Q data set, i.e. a change to *RF POWER* does not trigger a new measurement.

IEC/IEEE-bus command      `CALC:FEED 'XTIM:RFP'`



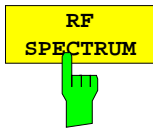


The *RF SPECTRUM* softkey selects the RF signal in the frequency domain for display. In contrast to normal spectrum analyzer operation, the measured values are determined using FFT from the recorded I/Q data set.

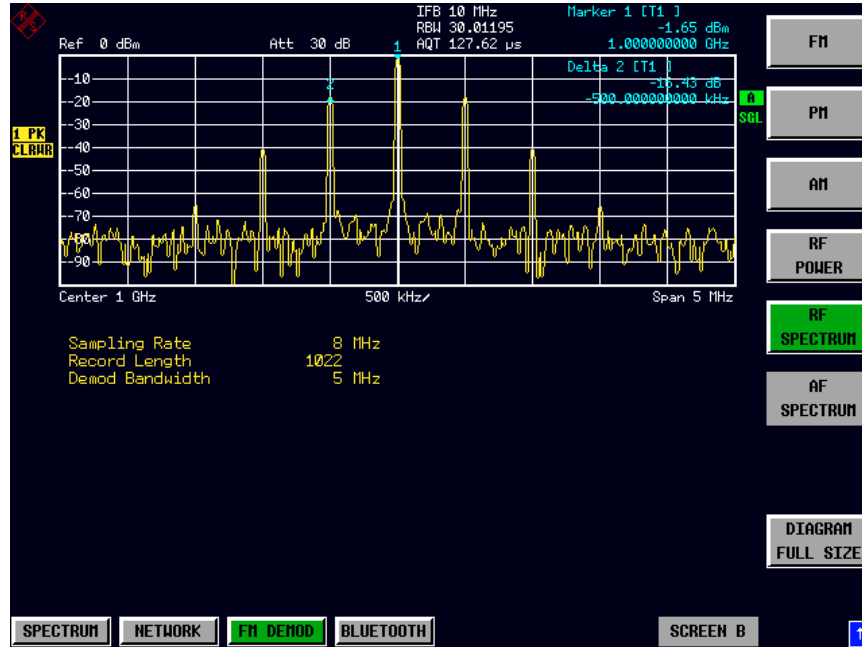


In *SINGLE SWEEP* mode, the data is determined from the current I/Q data set, i.e. a change to *SPECTRUM* does not trigger a new measurement.

IEC/IEEE-bus command      `CALC:FEED 'XTIM:SPECTRUM'`

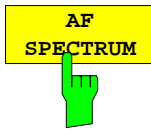

The *AF SPECTRUM* softkey selects the display of the AF spectrum. The AF spectrum can be calculated from the FM signal, PM signal or the RF signal in the time domain. The softkey is not available if the RF spectrum display is selected.

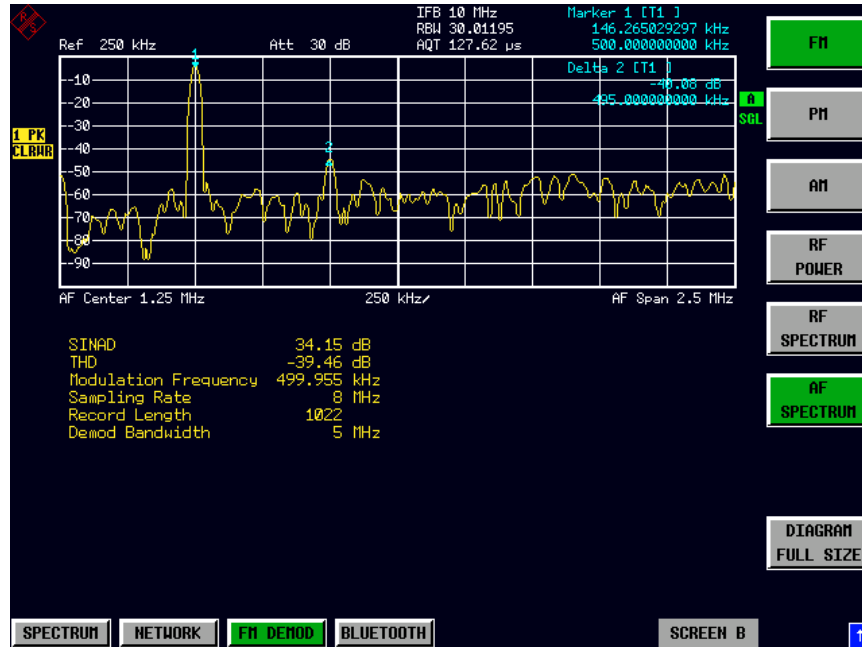


In *SINGLE SWEEP* mode, the data is determined from the current I/Q data set, i.e. a change to *AF SPECTRUM* does not trigger a new measurement.

```
IEC/IEEE-bus command      CALC:FEED 'XTIM:FM:AFSP'
                           CALC:FEED 'XTIM:PM:AFSP'
                           CALC:FEED 'XTIM:AM:AFSP'
                           CALC:FEED 'XTIM:RFP:AFSP'
```



The *SELECT TRACE* softkey selects the trace, the data of which is to be displayed in the lower half of the screen.


```
IEC/IEEE-bus command      --
```

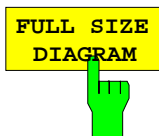

The *FULL SIZE DIAGRAM* switches the diagram to full screen size.


```
IEC/IEEE-bus command:    DISP:SIZE LARG
```

### Scaling of Measurement Results – RANGE Menu

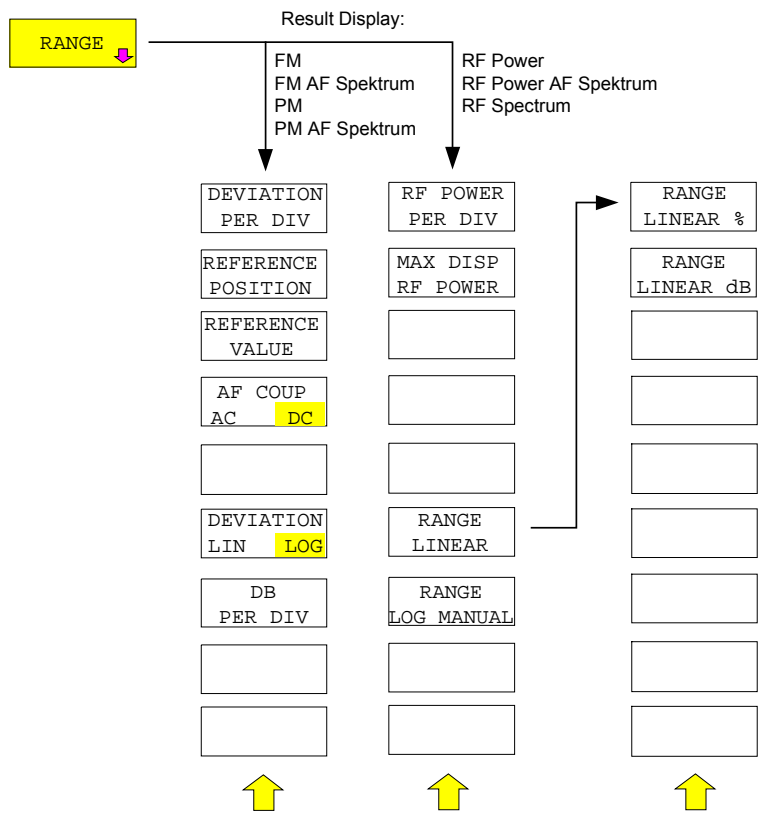

The *RANGE* softkey opens a submenu for determining the diagram scaling for the selected measurement. The softkeys visible depend on the selected measurement function (FM / RF POWER / PM / RF SPECTRUM):

### Scaling Functions for FM, PM and AM Result Display

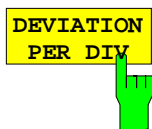


The *DEVIATION PER DIV* softkey allows the phase or frequency deviation to be displayed in the range 1 Hz/div to 1 MHz/div with the FM display and in the range 0.0001 rad/div to 1000 rad/div with the PM display.

To prevent corruption of the measurement results, the IF bandwidth of the analyzer must be larger than the maximum frequency deviation plus modulation frequency (*IF BANDWIDTH* softkey in the *FM DEMOD* menu).

The softkey is not available in the AF spectrum display of the FM or PM signal, as scaling in this case is performed via the *DB PER DIV* and *REFERENCE VALUE* softkeys.


IEC/IEEE-bus command      `DISP:WIND:TRAC:Y:PDIV 50kHz`

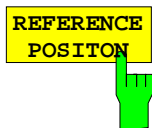

The *REFERENCE POSITION* softkey determines the position of the reference line for the phase or frequency deviation on the y axis of the diagram. In the default setting of the analyzer, this line corresponds to a frequency deviation of 0 Hz for the display of the FM signal or to a phase deviation of 0 rad for the display of the PM signal.

The position is entered as a percentage of the diagram height with 100 % corresponding to the upper diagram border. The default setting is 50 % (diagram center) for the display of the PM or FM signal and 100% (upper diagram border) for the AF spectrum display of the PM or FM signal.

IEC/IEEE-bus command      `DISP:WIND:TRAC:Y:RPOS 50PCT`

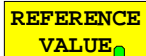
 A yellow rectangular button with the text "REFERENCE VALUE" in black. A green hand icon is pointing at the button.

The *REFERENCE VALUE* softkey determines the frequency or phase deviation at the reference line of the y axis. The reference value is set separately for each display of the PM and FM signal and the AF spectrum of the PM and FM signal.

#### FM signal display:

The reference value makes it possible to take individual frequency offsets into account in the trace display (in contrast, the *AF COUP AC/DC* softkey permits automatic correction by the average frequency offset of the signal).

Values between 0 and  $\pm 10$  MHz can be selected. The softkey is not available if the *AF COUP AC* function has been activated.

#### AF spectrum display of the FM signal:

In the default setting, the reference value defines the FM deviation at the upper diagram border.

Values between 0 and 10 MHz can be selected.

#### PM signal display:

The reference value makes it possible to take individual phase offsets into account in the trace display (in contrast, the *AF COUP AC/DC* softkey permits automatic correction by the average phase offset of the signal).


Values between 0 and  $\pm 10000$  rad can be selected. The softkey is not available if the *AF COUP AC* function has been activated.

#### AF spectrum display of the PM signal:

In the default setting, the reference value defines the PM deviation at the upper diagram border.

Values between 0 and 10000 rad can be selected.

IEC/IEEE-bus command      `DISP:WIND:TRAC:Y:RVAL 0HZ`

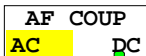
 A white rectangular button with the text "AF COUP" at the top, "AC" on the left, and "DC" on the right. A green hand icon is pointing at the "DC" option.

The *AF COUP AC/DC* softkey controls the automatic correction of the frequency offset and phase offset of the input signal:

#### FM signal display:

- If DC is selected, the absolute frequency is displayed, i.e. an input signal with an offset relative to the center frequency is not displayed symmetrically with respect to the zero line.
- If AC is selected, the frequency offset is automatically corrected, i.e. the trace is always symmetric with respect to the zero line.

#### PM signal display:

- If DC is selected, the phase runs according to the existing frequency offset. In addition, the DC signal contains a phase offset of  $\pm\pi$ .
- If AC is selected, the frequency offset and phase offset are automatically corrected, i.e. the trace is always symmetric with respect to the zero line.

The softkey is not available with the AF spectrum display of the FM or PM signal.

IEC/IEEE-bus command      `SENS:ADEM:AF:COUP DC`




The *ZERO PHASE REF POS* softkey defines the position at which the phase of the PM-demodulated signal is set to 0 rad. The entry is made with respect to time. In the default setting, the first measured value is set to 0 rad. This softkey is available only in the PM display with DC coupling.

IEC/IEEE-bus command      `SENS:ADEM:PM:RPO:X 10us`



The *DEVIATION LIN/LOG* softkey switches between logarithmic and linear display of the frequency deviation or phase deviation or modulation depth (AM). The softkey is only available in the AF spectrum deviation of the FM or PM or AM signal.

IEC/IEEE-bus command      `DISP:WIND:TRAC:Y:SPAC LOG`

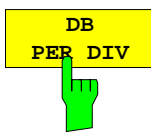

The *DB PER DIV* softkey makes it possible to select the FM or PM deviation or modulation depth to be displayed in the range 0.1 dB/div to 20 dB/div. The softkey is not available if linear display is set.

IEC/IEEE-bus command      `DISP:WIND:TRAC:Y:PDIV 5DB`




The *PHASE WRAP ON/OFF* softkey activates/deactivates phase wrap.

*ON*    The phase will be displayed in the range  $\pm 180^\circ$  ( $\pm\pi$ ). For example, if the phase exceeds  $+180^\circ$ ,  $360^\circ$  is subtracted from the phase value, with the display thus showing  $>-180^\circ$ .


*OFF*    The phase will not be wrapped.

This softkey is available in the PM signal displays.

IEC/IEEE-bus command      `CALC:FORM PHAS`

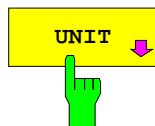

The *UNIT* softkey opens the submenu for selecting units.

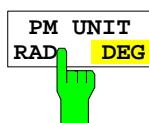

The *PM UNIT RAD/DEG* softkey is used to select the unit for displaying PM signals.

IEC/IEEE-bus command      `UNIT:ANGL RAD`

## Scaling Functions for Result Displays with Level Display

MAX DISP  
RF POWER



The *MAX DISP RF POWER* determines the maximum RF power to be displayed.

The selected value affects only the display. The reference level determines the dynamic range limit of the analyzer's A/D converter. If the input signal exceeds the selected reference level, the measurement results are impaired by A/D converter overloading. If a value higher than the reference level is selected for *MAX DISP RF POWER*, the dynamic range limit (= reference level) is highlighted by a red line on the screen:

———— POS x dBm —————

IEC/IEEE-bus command      `DISP:WIND:TRAC:Y:RVAL 10 DBM`

RF POWER  
LOG    LIN



The *RF POWER LOG/LIN* softkey allows the user to select logarithmic or linear level display.

IEC/IEEE-bus command      `DISP:WIND:TRAC:Y:SPAC LOG`

RF POWER  
PER DIV



The *RF POWER PER DIV* softkey determines the *RELATIVE* power between two divisions on the y axis of the diagram.

IEC/IEEE-bus command      `DISP:WIND:TRAC:Y:PDIV 10 DB`

RANGE  
LINEAR



The *RANGE LINEAR* softkey is identical to the softkey of the base unit.

RANGE  
LINEAR %



The *RANGE LINEAR %* softkey is identical to the softkey of the base unit.

RANGE  
LINEAR dB




The *RANGE LINEAR dB* softkey is identical to the softkey of the base unit.

RANGE LOG  
MANUAL



The *RANGE LOG MANUAL* softkey is identical to the softkey of the base unit.

# FREQ Key

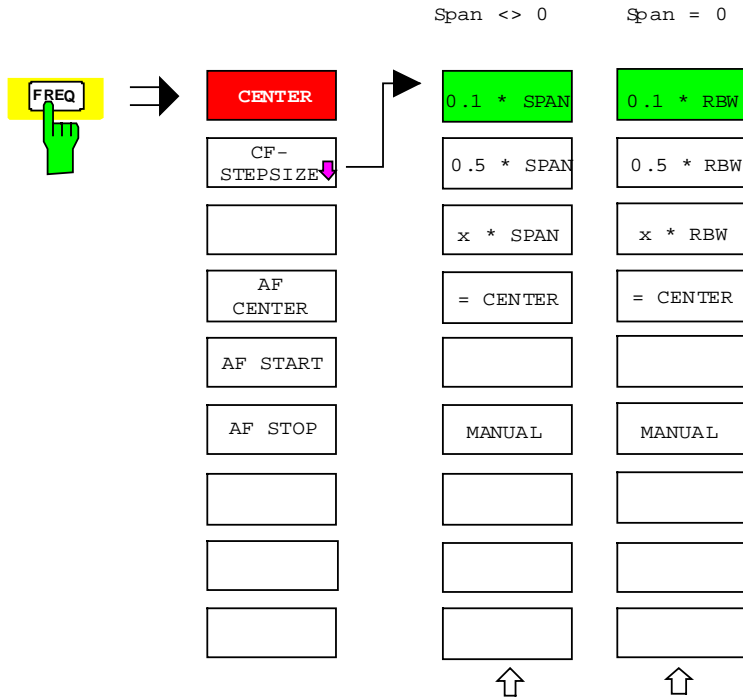


The *FREQ* menu functions are identical to those of the base unit.

If the AF spectrum display is active, the *AF CENTER*, *AF START* and *AF STOP* softkeys, with which the displayed frequency range is defined within the demodulation bandwidth, are also available.




The *AF CENTER* softkey allows the user to select the center frequency within the AF spectrum.

IEC/IEEE-bus command      `SENS:ADEM:AF:CENT 1MHZ`

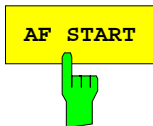

The *AF START* softkey allows the user to select the start frequency within the AF spectrum.

IEC/IEEE-bus command      `SENS:ADEM:AF:STAR 0HZ`

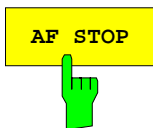


The *AF STOP* softkey allows the user to select the stop frequency within the AF spectrum.


The maximum AF stop frequency corresponds to half the demodulation bandwidth.

IEC/IEEE-bus command      `SENS:ADEM:AF:STOP 2MHZ`

# SPAN Key

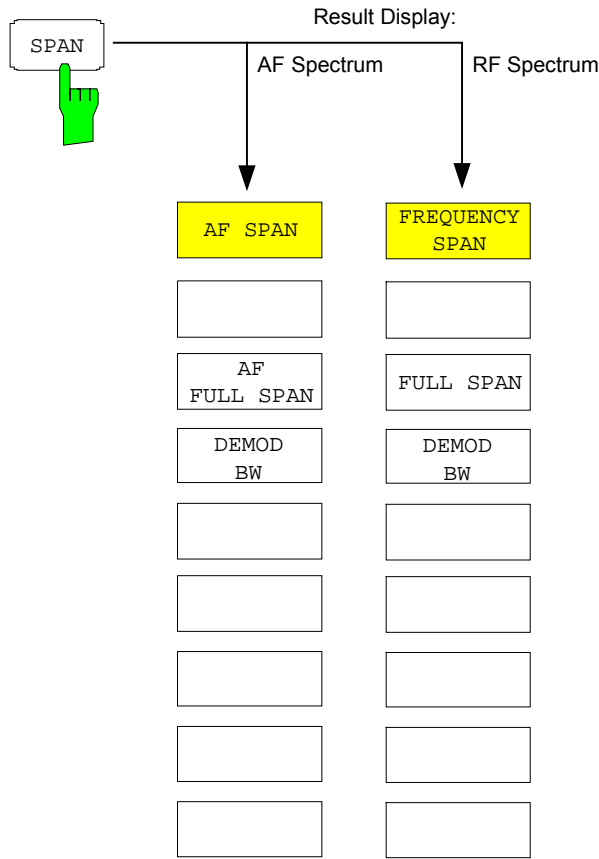


The *SPAN* menu allows the user to select the frequency range to be displayed if the spectrum displays of the FM demodulator are active.

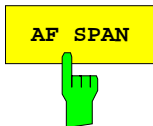


The *AF SPAN* softkey allows the user to select the frequency range if the AF spectrum displays are active. Values between the sampling rate/200 and the demodulation bandwidth/2 can be selected.

IEC/IEEE-bus command      ADEM:AF:SPAN 2.5 MHz

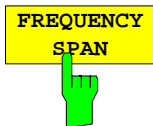

The *FREQUENCY SPAN* softkey allows the user to select the frequency range if the *RF SPECTRUM* display is active. Values between the sampling rate/200 and the demodulation bandwidth/2 can be selected.


IEC/IEEE-bus command      ADEM:SPEC:SPAN:ZOOM 5 MHz

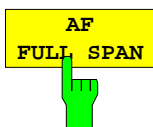

The *AF FULL SPAN* softkey sets the maximum frequency range if the AF spectrum displays are active. The maximum frequency range corresponds to half the demodulation bandwidth.


IEC/IEEE-bus command      ADEM:AF:SPAN:FULL



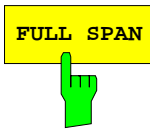

The *FULL SPAN* softkey sets the maximum frequency range if the RF spectrum display is active. The maximum frequency range corresponds to the demodulation bandwidth.

IEC/IEEE-bus command      ADEM:SPEC:SPAN:ZOOM MAX

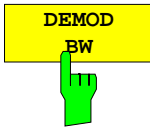


The demodulation bandwidth of the FM demodulator is selected with the *DEMOD BW* softkey.

**Note:**

*The function is identical to the function of the DEMOD BW softkey in the FM DEMOD main menu.*

IEC/IEEE-bus command      SENS:BAND:DEM 10MHz

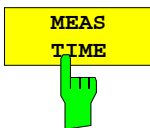

The *MEAS TIME* softkey opens the input field for the measurement time of the FM demodulator.


**Note:**

*The function is identical to the function of the MEAS TIME softkey in the FM DEMOD main menu.*


IEC/IEEE-bus command      SENS:ADEM:MTIM 62.5US  
SENS:SWE:TIME 62.5US



## BW Key

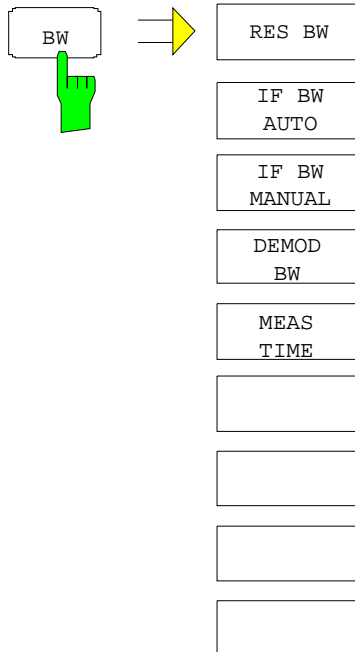


The *BW* menu comprises all functions relating to the band limiting of the analyzed signal.

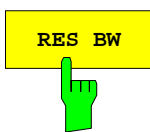

If the Spectrum result display is active, the *RES BW* softkey selects the resolution bandwidth for the signal displayed. Note that these resolution bandwidths are obtained by means of FFT filters from 1 Hz to 10 MHz.

**Notes:** *The softkey is available only if the RF SPECTRUM or AF SPECTRUM result display is active.  
The IF bandwidth is limited by analog LC filters using the IF BW MANUAL and IF BW AUTO softkeys.*

IEC/IEEE-bus command      ADEM:SPEC:BAND:RES 10 kHz

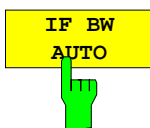

The *IF BW AUTO* softkey couples the IF bandwidth of the analyzer (i.e. the bandwidth of the analog LC filters) to the selected demodulation bandwidth.

IEC/IEEE-bus command      BAND:RES:AUTO ON




The *IF BW MANUAL* softkey allows the IF bandwidth of the analyzer to be entered (i.e. the bandwidth of the analog filters). Bandwidths from 300 kHz to 10 MHz can be selected.

IEC/IEEE-bus command      BAND:RES 1 MHz

**Notes:** *Manual setting of the IF bandwidth is usually not required. If an IF bandwidth is set that is narrower than the value defined by AUTO coupling,*


- a) *the RF frequency response is identical to that of the IF filter if the spectrum display is active,*
- b) *an AF frequency response corresponding to a lowpass filter equivalent to the IF filter occurs in the case of FM demodulation.*

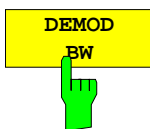

The demodulation bandwidth of the FM demodulator is selected via the *DEMOD BW* softkey.

**Note:** *The function is identical to that of the DEMOD BW softkey in the FM DEMOD main menu.*

IEC/IEEE-bus command      SENS:BAND:DEM 10MHz

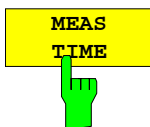


The *MEAS TIME* softkey opens the editor for entering the data-recording time of the FM demodulator.

**Note:** *The function is identical to that of the MEAS TIME softkey in the FM DEMOD main menu.*

IEC/IEEE-bus command      SENS:ADEM:MTIM 62.5US  
SENS:SWE:TIME 62.5US

## TRIG Key

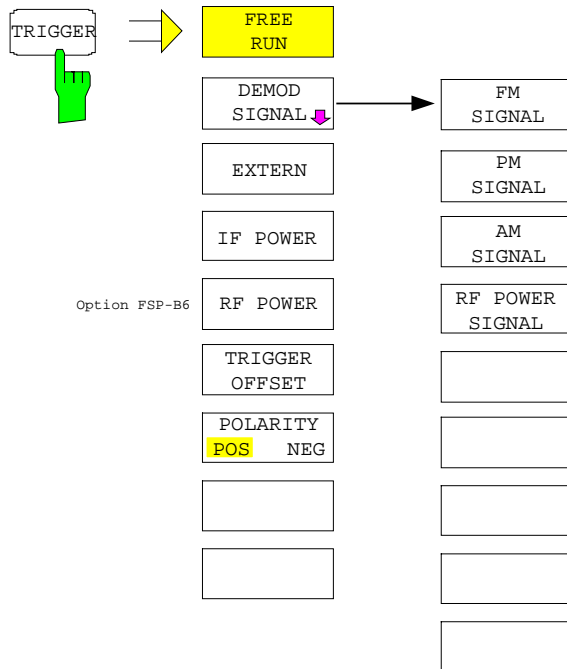


The *TRIG* key opens a menu for setting the different trigger sources and for selecting the trigger polarity. The active trigger mode is indicated by highlighting the associated softkeys.

To indicate that a trigger mode other than *FREE RUN* has been set, the **TRG** enhancement label is displayed on the screen. If two measurement windows are displayed, TRG is indicated next to the window in question.




The *FREE RUN* softkey activates the free-running sweep, i.e. the measurement start is not triggered explicitly. When a measurement is completed, the next one starts immediately. *FREE RUN* is the default setting.

 IEC/IEEE-bus command: `TRIG:SOUR IMM`



 The *DEMOD SIGNAL* softkey opens the menu for selecting the various trigger sources.




With a modulated signal, the trigger source that is selected with the *FM SIGNAL* softkey is the point at which a specific absolute phase is reached by the input signal. The associated trigger threshold can be entered simultaneously.

Measurement is triggered if the selected threshold is exceeded. A periodic signal modulated onto the carrier frequency can be displayed in this way.

**Notes:** For triggering with the *FM SIGNAL* trigger source to be successful, the measurement time must cover at least five periods of the audio signal. The triggering responds to the absolute frequency, i.e. it is always DC-coupled.

 IEC/IEEE-bus command: `TRIG:SOUR FM`  
`TRIG:LEV:FM 10 kHz`




With a modulated signal, the trigger source that is selected with the *PM SIGNAL* softkey is the point at which a specific absolute frequency is reached. The associated trigger threshold can be entered simultaneously.

Measurement is triggered if the selected threshold is exceeded. A periodic signal modulated onto the carrier frequency can be displayed in this way.

**Note:** For triggering with the *PM SIGNAL* trigger source to be successful, the measurement time must cover at least five periods of the audio signal. Triggering is either AC- or DC-coupled, depending on the *AF COUPLING* AC/DC setting in the *RANGE* menu.


IEC/IEEE-bus command: `TRIG:SOUR PM`  
`TRIG:LEV:PM 0.2 rad`

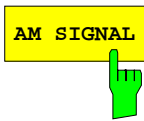

With a modulated signal, the trigger source that is selected with the *AM SIGNAL* softkey is the point at which a specific modulation depth is reached. The associated trigger threshold can be entered simultaneously. Measurement is triggered if the selected threshold is exceeded. A periodic signal modulated onto the carrier frequency can be displayed in this way.

**Note:** For triggering with the *AM SIGNAL* trigger source to be successful, the measurement time must cover at least five periods of the audio signal.

 
IEC/IEEE-bus command:      TRIG:SOUR AMR  
    TRIG:LEV:AM:REL 0.2 rad



With a modulated signal (AF signal), the trigger source that is selected with the *RF POWER SIGNAL* softkey is the point at which a specific signal level is reached. The associated trigger threshold can be entered simultaneously. Measurement is triggered if the selected threshold is exceeded. A periodic signal modulated onto the carrier frequency can be displayed in this way.


**Note:** The *RF POWER SIGNAL* trigger differs from the *RF POWER* trigger in that the AF signal is taken into account rather than the RF signal. For triggering with the *AM* trigger source to be successful, the measurement time must cover at least five periods of the audio signal.

 IEC/IEEE-bus command:      TRIG:SOUR AM  
    TRIG:LEV:AM -30 dBm



The *EXTERN* softkey activates triggering by a TTL signal at the *EXT TRIGGER/GATE* input connector on the rear panel.

 IEC/IEEE-bus command:      TRIG:SOUR EXT  
    SWE:EGAT:SOUR EXT



The *IF POWER* softkey activates triggering of measurement by means of signals outside the measurement channel.

To this end, the FSP uses a level detector on the second intermediate frequency. The threshold of the level detector can be selected between -30 dBm and -10 dBm at the input mixer.

 
This means that the input signal range within which the trigger responds can be calculated as follows:

$$\text{Mixerlevel}_{\min} + \text{RFAtt} - \text{Pr eampGain} \leq \text{Input Signal} \leq \text{Mixerlevel}_{\max} + \text{RFAtt} - \text{Pr eampGain}$$

The bandwidth on the intermediate frequency is 10 MHz. The measurement is triggered if the trigger threshold is exceeded by a signal in a range of 5 MHz around the center frequency.

This allows spurious signals to be measured, such as pulsed carriers, even if the carrier itself is not within the display frequency range.

IEC/IEEE-bus command:      TRIG:SOUR IFP  
    SWE:EGAT:SOUR IFP



The *RF POWER* softkey activates triggering of measurement by means of signals outside the measurement channel.

To this end, the analyzer uses a level detector on the first intermediate frequency. The threshold of the level detector can be selected between -50 dBm and -10 dBm at the input mixer. This means that the input signal range within which the trigger responds can be calculated as follows:

$$\text{Mixerlevel}_{\min} + \text{RFAtt} - \text{Pr eampGain} \leq \text{Input Signal} \leq \text{Mixerlevel}_{\max} + \text{RFAtt} - \text{Pr eampGain}$$

The bandwidth on the intermediate frequency is 80 MHz. The measurement is triggered if the trigger threshold is exceeded by the set frequency in a 40 MHz range. This allows spurious to be measured, such as pulsed carriers, even if the carrier itself is not within the display frequency range.

**Note:** The function is only available with option TV and RF Trigger FSP-B6.

IEC/IEEE-bus command: TRIG:SOUR RFP  
SWE:EGAT:SOUR RFP



The *TRIGGER OFFSET* softkey allows the user to enter a time offset between the trigger signal and the beginning of the measurement.

Triggering is delayed (entry value >0) or advanced (entry value <0) by the time entered.

The permissible setting range depends on the demodulation bandwidth and is given in the following table:

Demodulation bandwidth	Min. trigger offset	Max. trigger offset
120 MHz	-126 ns	31.7ms
50 / 85 MHz	-253 ns	63.5 ms
30 MHz	-507 ns	126.9 ms
18 MHz	-1 ms	253.9 ms
10 MHz	-2 ms	507.9 ms
8 MHz	-4.1 ms	1015.8 ms
5 MHz	-8.1 ms	2031.6 ms
3 MHz	-16.3 ms	4064.1 ms
1.6 MHz	-32.5 ms	8126.2 ms
800 kHz	-65 ms	16.2524 s
400 kHz	-130 ms	32.5048 s
200 kHz	-260.1 ms	65.0097 s
100 kHz	-520.2 ms	130.0193 s
50 kHz	-1040.4 ms	260.0386 s
25 kHz	-2080.7 ms	520.0773 s
12.5 kHz	-4151.5 ms	1040.1546 s
6.4 kHz	-8.322 s	2080.3 s
3.2 kHz	-16.64 s	4160.6 s
1.6 kHz	-33.29 s	8321.2 s
800 Hz	-66.58 s	16642 s
400 Hz	-133.1s	33284 s
200 Hz	-266.3 s	66569 s
100 Hz	-532.6 s	133139 s

IEC/IEEE-bus command TRIG:HOLD 10US



The *POLARITY POS/NEG* softkey determines the trigger slope polarity.

The measurement sequence starts upon a positive or negative slope of the trigger signal. The valid setting is highlighted.


The setting is valid for all trigger modes except *FREE RUN*.

The default setting is *POLARITY POS*.

**Note:** The function is available only for detector boards with model index  $\geq 3$ . Previous boards ignore the setting.

IEC/IEEE-bus command: TRIG:SLOP POS

# MKR Key

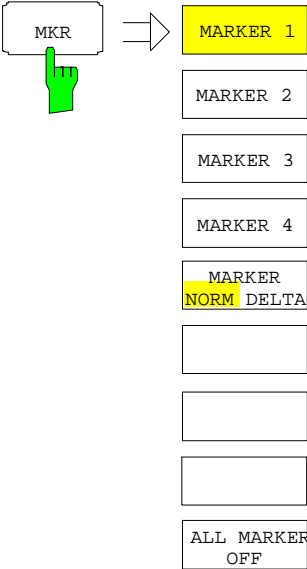


The *MKR* menu functions are identical to those of the base unit.

Only the measurement result display is coupled to the active result display and is in Hz if FM and FM AF spectrum are selected, in rad if PM and PM AF spectrum are selected, or in dBm or dB if RF POWER, RF POWER AF spectrum and RF SPECTRUM are selected.




## MKR ⇒ Key

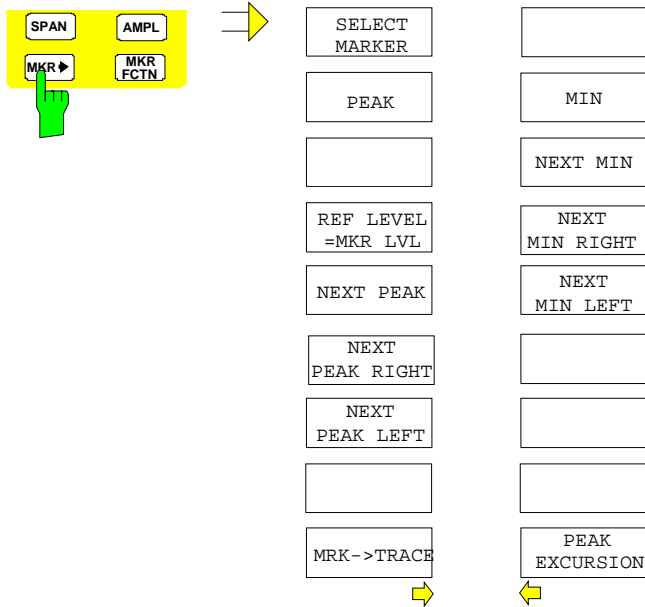

The *MKR ⇒* menu functions are identical to those of the base unit.  
 The function *REF LEVEL = MKR LVL*

is not available if the FM result display is active.

# MKR FCTN Key

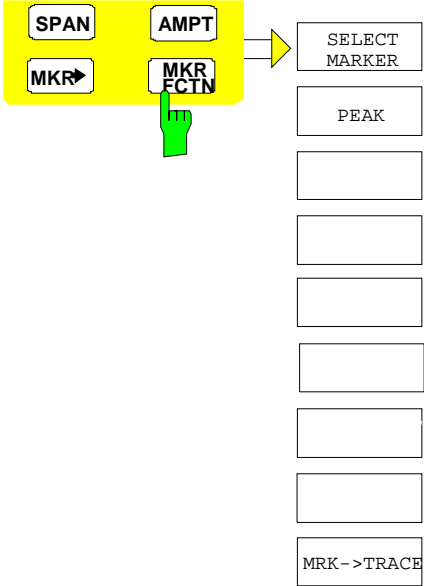

The available *MKR FCTN* menu functions are identical to those of the base unit.

## **MEAS Key**

The *MEAS* menu functions are not available in the FM DEMOD mode.

## **Other Keys**

The functions of the other keys are identical to those of the base unit. Please refer to the relevant chapters in the operating manual of the base unit.



## Contents - Chapter " Remote Control - Description of Commands "

<b>3 Remote Control - Description of Commands.....</b>	<b>3.1</b>
<b>Common Commands.....</b>	<b>3.1</b>
CALCulate:DELTa marker Subsystem.....	3.2
CALCulate:FEED Subsystem.....	3.3
CALCulate:FORMat - Subsystem .....	3.4
CALCulate:MARKer Subsystem.....	3.5
CALCulate:MARKer:FUNCTion:ADEMod Subsystem .....	3.6
CALCulate:UNIT Subsystem.....	3.9
<b>DISPlay Subsystem.....</b>	<b>3.10</b>
<b>INSTRument Subsystem .....</b>	<b>3.12</b>
<b>SENSE Subsystem .....</b>	<b>3.13</b>
[SENSE:]ADEMod Subsystem .....	3.13
[SENSE:]ADEMod:AM Subsystem .....	3.20
[SENSE:]ADEMod:FM Subsystem .....	3.29
[SENSE:]ADEMod:PM Subsystem .....	3.34
[SENSE:]ADEMod:SPECtrum - Subsystem .....	3.38
SENSE:BANDwidth Subsystem .....	3.42
<b>TRACe Subsystem .....</b>	<b>3.44</b>
<b>TRIGger Subsystem.....</b>	<b>3.46</b>
UNIT Subsystem .....	3.49
<b>Table of Softkeys and Hotkeys including Assignment of Remote-Control Commands .....</b>	<b>3.50</b>
FM Demodulator Main Menu.....	3.50
FREQ Key .....	3.51
SPAN Key.....	3.52
AMPT Key .....	3.52
BW Key .....	3.53
TRIG Key.....	3.54
MKR Key .....	3.54
MKR ⇒ Key.....	3.54
MKR FCTN Key.....	3.55





## CALCulate:DELTamarker Subsystem

The CALCulate:DELTamarker subsystem controls the delta marker functions in the instrument.

COMMAND	PARAMETERS	UNIT	COMMENT
CALCulate<1 2> :DELTamarker<1...4> :Y?	--	--	query only

### CALCulate<1|2>:DELTamarker<1...4>:Y?

This command queries the measured value of the selected delta marker in the indicated measurement window. The corresponding delta marker will be activated, if necessary. The output is always a relative value referred to marker 1.

To obtain a valid query result, a complete sweep with synchronization to the sweep end must be performed between the activation of the delta marker and the query of the y value. This is only possible in single sweep mode.

Depending on the on the activated measuring functions, the query result is output in the units below:

- Result display FM: Hz
- Result display PM: rad | deg
- Result display AM: %
- Result display RF POWER: dB (logarithmic display)  
% (linear display)
- Result display RF SPECTRUM: dB (logarithmic display)  
% linear display)
- Result display AF SPECTRUM: dB (logarithmic display)  
Hz | % | rad | deg (linear display)

**Example:**

```
"INIT:CONT OFF"  Switch to single-sweep mode
"CALC:DELT2 ON"  Switch on delta marker 2
"INIT;*WAI"      Start a sweep and wait for its end
"CALC:DELT2:Y?" Output measured value of delta marker 2.
```

**Characteristics:** \*RST value: -  
SCPI: device-specific



## CALCulate:FEED Subsystem

The CALCulate:FEED subsystem selects the type of evaluation of the measured data. This corresponds to the selection of the Result Display in manual mode.

If the FM demodulator is active, the selection of the type of evaluation is independent of the measurement window. Therefore, the numeric suffix <1|2> is irrelevant and ignored.

COMMAND	PARAMETERS	UNIT	COMMENT
CALCulate<1 2>:FEED	<string>		no query

### CALCulate<1|2>:FEED <string>

This command selects the trace data to be displayed.

**Parameters:**

<string>:=

'XTIM:AM:RELative[:TDOMain]'	Demodulated AM signal in standardized display.
'XTIM:AM:RELative:AFSPectrum<1...3>'	AF spectrum of the demodulated AM signal in standardized display, results referenced to traces 1 to 3.
'XTIM:AM[:ABSolute][:TDOMain]'	Demodulated AM signal in level display. Same as 'XTIM:RFPower'.
'XTIM:AM[:ABSolute]:AFSPectrum<1...3>'	AF spectrum of the demodulated AM signal in level display, results referenced to traces 1 to 3. Same as 'XTIM:RFPower:AFSPectrum'.
'XTIM:RFPower[:TDOMain]'	Demodulated AM signal in level display.
'XTIM:RFPower:AFSPectrum<1...3>'	AF spectrum of the demodulated AM signal in level display, results referenced to traces 1 to 3.
'XTIM:FM[:TDOMain]'	Demodulated FM signal.
'XTIM:FM:AFSPectrum<1...3>'	AF spectrum of the demodulated FM signal, results referenced to traces 1 to 3.
'XTIM:PM[:TDOMain]'	Demodulated PM signal
'XTIM:PM:AFSPectrum<1...3>'	AF spectrum of the demodulated PM signal
'XTIM:AMSummary<1...3>[:ABSolute]'	AM results in level display, referenced to traces 1 to 3.
'XTIM:AMSummary<1...3>:RELative'	AM results in standardized display, referenced to traces 1 to 3.
'XTIM:FMSummary<1...3>'	FM results, referenced to traces 1 to 3
'XTIM:PMSummary<1...3>'	PM results, referenced to traces 1 to 3.
'XTIM:SPEctrum'	RF spectrum of the signal determined from the measured data via FFT.

**Example:** "CALC:FEED `XTIM:FM`" Select the display of the FM signal

**Characteristics:** \*RST value: XTIM:FM'  
SCPI: conforming

## CALCulate:FORMat - Subsystem

The CALCulate:FORMat subsystem defines the conversion of measured data.

COMMAND	PARAMETERS	UNIT	COMMENT
CALCulate<1 2> :FORMat	PHASe   UPHase		

### :CALCulate<1|2>:FORMat PHASe | UPHase

This command activates the limitation to  $\pm 180^\circ$ .

**Parameter:** PHASe: Limitation to  $\pm 180^\circ$   
UPHase: Unwrapped

**Example:** " :CALC:FORM PHAS " activated the limitation to  $\pm 180^\circ$ .

**Characteristics::** \*RST value: UPAS  
SCPI: conforming

## CALCulate:MARKer Subsystem

The CALCulate:MARKer subsystem controls the marker functions in the instrument.

COMMAND	PARAMETERS	UNIT	COMMENT
CALCulate<1 2> :MARKer<1...4> :Y? :PEXCursion	-- <numeric_value>	-- DB   DEG   RAD   HZ PCT	query only

### CALCulate<1|2>:MARKer<1...4>:Y?

This command queries the measured value of the selected marker in the selected measurement window. The corresponding marker is activated before or switched to marker mode, if necessary. To obtain a valid query result, a complete sweep with synchronization to the sweep end must be performed between the activation of the marker and the query of the y value. This is only possible in single sweep mode.

**Example:**

```
"INIT:CONT OFF"      Switch to single-sweep mode
"CALC:MARK2 ON"      Switch on marker 2
"INIT;*WAI"          Start a sweep and waits for its end
"CALC:MARK2:Y?"      Output the measured value of marker 2.
```

**Characteristics:** \*RST value: -  
SCPI: device-specific

### CALCulate<1|2>:MARKer<1...4>:PEXCursion <numeric\_value>

This command defines the peak excursion, i.e. the spacing below the trace maximum which must be attained before a new maximum is recognized, or the spacing above the trace minimum which must be attained before a new minimum is recognized. The set value is valid for all markers and delta markers.

The unit of the numerical value depends on the active display.

**Example:**

```
"CALC:MARK:PEXC 10dB"      ' SPECTRUM display
"CALC:MARK:PEXC 100 Hz"    ' FM DEMOD display
```

**Characteristics:** \*RST value: 50 kHz (for FM displays)  
0.5 RAD (for PM displays)  
5 PCT (for standardized AM displays)  
6 dB (for level displays)  
SCPI: device-specific

The numeric suffix <1...4> in MARKer is irrelevant.





**CALCulate<1|2>:MARKer<1...4>:FUNCTion:ADEMod:SINad:RESult<1...3>?**

This command queries the result of the SINAD measurement. The numeric suffix (:RESult<1...3>) indicates whether trace 1, 2 or 3 is selected.

**Example:**

"ADEM ON"	'Switch on FM demodulator
"CALC:FEED XTIM:FM:AFSP"	'Switch on AF spectrum of FM
"DISP:TRAC ON"	'Switch on trace
"CALC:MARK:FUNC:ADEM:SIN:RES?"	'Query SINAD result

**Characteristics:** \*RST value: -  
SCPI: device-specific

**CALCulate<1|2>:MARKer<1...4>:FUNCTion:ADEMod:THD:RESult<1...3>?**

This command queries the result of the THD measurement. The numeric suffix (:RESult<1...3>) indicates whether trace 1, 2 or 3 is selected.

**Example:**

"ADEM ON"	'Switch on FM demodulator
"CALC:FEED XTIM:FM:AFSP"	'Switch on AF spectrum of FM
"DISP:TRAC ON"	'Switch on trace
"CALC:MARK:FUNC:ADEM:THD:RES?"	'Query THD result

**Characteristics:** \*RST value: -  
SCPI: device-specific

**CALCulate<1|2>:MARKer<1...4>:FUNCTion:ADEMod:CARRier[:RESult<1...3>]?**

This command queries the carrier power.

With the RF power result display, the carrier power is determined from trace 1 to 3 as specified in the numeric suffix. With all other result displays, the carrier power is determined from the current trace data (CLR/WRITE trace).

**Example:**

"ADEM ON"	'Switch on FM demodulator
"CALC:FEED XTIM:RFP"	'Switch on RF power result display
"CALC:MARK:FUNC:ADEM:CARR?"	'Query carrier power

**Characteristics:** \*RST value: -  
SCPI: device-specific

## CALCulate:UNIT Subsystem

The CALCulate:Unit subsystem defines the units for the parameters that can be set and the measurement results.

COMMAND	PARAMETERS	UNIT	COMMENT
CALCulate<1 2> :UNIT :ANGLe	DEG   RAD		

### CALCulate<1|2>: UNIT:ANGLE DEG | RAD

This command selects the unit for angles.

Example: "CALC:UNIT:ANGL DEG"

Characteristics: \*RST value: RAD  
SCPI: device-specific

## DISPlay Subsystem

The DISPlay subsystem controls the selection and presentation of textual and graphic information as well as of trace data on the display.

COMMAND	PARAMETERS	UNIT	COMMENT
DISPlay [:WINDow<1 2>] :TRACe<1...3> :Y [:SCALe] :RVALue :RPOSition :PDIVision :SPACing	<numeric_value> <numeric_value> <numeric_value> LINear LOGarithmic LDB	DB   HZ   PCT DEG   RAD PCT DB   HZ PCT DEG RAD	

### DISPlay[:WINDow<1|2>]:TRACe<1...3>:Y[:SCALe]:RVALue <numeric\_value>

This command defines the reference value assigned to the reference position, thus corresponding to the REFERENCE VALUE parameter in manual control. Separate reference values are maintained for the various displays.

The numeric suffix in TRACe<1...3> is irrelevant.

**Example:** "DISP:WIND1:TRAC:Y:RVAL 0" defines the display value of the reference position at 0 dB

**Characteristics:** \*RST value: 0 Hz  
0 rad (PM display)  
0 PCT (AM display)  
250 kHz (FM AF spectrum display)  
10 rad (PM AF spectrum display)  
100 PCT (AM AF spectrum display)  
SCPI: device-specific

### DISPlay[:WINDow<1|2>]:TRACe<1...3>:Y[:SCALe]:RPOSition 0..100PCT

This command defines the position of the reference value in the selected measurement window. The numeric suffix in TRACe<1...3> is irrelevant.

Separate reference positions are maintained for the following displays:

- RF power, RF spectrum and AF spectrum of the RF power
- FM, PM and AM
- AF spectrum of the FM, PM and A

**Example:** "DISP:WIND1:TRAC:Y:RPOS 50PCT"

**Characteristics:** \*RST value: 100 PCT(level display)  
50 PCT (FM, PM or AM display)  
100 PCT(AF spectrum display of the FM, PM or AM)  
SCPI: conforming





## INSTRUMENT Subsystem

The INSTRUMENT subsystem selects the operating mode of the unit either via text parameters or fixed numbers.

COMMAND	PARAMETERS	UNIT	COMMENT
INSTRUMENT [:SElect] :NSElect	SANalyzer  ADEMod   <numeric_value>		

### INSTRUMENT[:SElect] SANalyzer | ADEMod |

This command switches between the operating modes by means of text parameters.

**Parameter:**

ADEMod: FM demodulator mode  
SANalyzer: Spectrum analysis mode

**Example:** "INST SAN" Switch to *SPECTRUM* mode

**Characteristics:** \*RST value: SANalyzer  
SCPI: conforming

Switching to ADEMod is only possible with option FM Demodulator FS-K7 installed.

### INSTRUMENT:NSElect 1|3

This command switches between the operating modes by means of numbers.

**Parameter:** 1: Spectrum analysis mode  
3: FM demodulator mode

**Example:** "INST:NSEL 1" Switch to *SPECTRUM* mode

**Characteristics:** \*RST value: 1  
SCPI: conforming

## SENSE Subsystem

The SENSE subsystem is organized in several subsystems. The commands of these subsystems directly control device-specific settings; they do not refer to the signal characteristics of the measurement signal.

The SENSE subsystem controls the essential parameters of the analyzer. In accordance with the SCPI standard, the keyword "SENSE" is optional for this reason, i.e. it is not necessary to include the SENSE node in command sequences.

### [SENSE:]ADEMod Subsystem


The purpose of the commands defined below is to set up the FSP spectrum analyzer for the measurement of FM, PM and AM modulated signals in a way that allows to obtain as many measurement results as possible with a single shot measurement.

For this purpose, the FSP has been equipped with a demodulator that is capable of performing both FM and AM demodulation at a time. Additionally maximum, minimum and average or current values can be obtained in parallel over a selected number of measurements. In order to make it suitable for bursted signals the demodulator can be configured in terms of pretrigger time, sample rate and record length.

**Notes:** *Demodulation will be performed offline, i.e. on signals previously stored into memory. The I/Q memory available for this purpose is 2 x 128 k samples. The sampling rate can be selected in the range from 15.625 to 32 MHz. The FSQ supports measurement data rates up to 64 MHz, and the option FSQ-B72 supports rates up to 256 MHz.*

**Example:** In the case of a *Bluetooth* signal, the signal in question is described in the following diagram:

Frequency versus time:

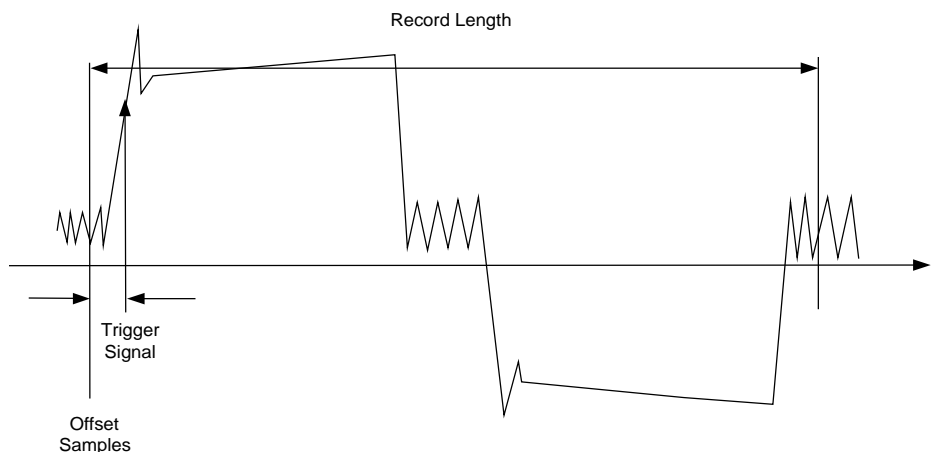

Measurement results of interest are:

- FM offset
- FM deviation (maximum and minimum) for signal modulated with '1' values only.
- FM deviation (maximum and minimum) for signal modulated with '0' values only.
- AM modulation depth for positive and negative burst ramp.

These values can be obtained by external computations from the frequency or amplitude versus time data. For this purpose, the FSP will deliver the following results:

- Demodulated FM signal (current values, averaged, maxhold or minhold selectable)

- Demodulated AM signal (current values, averaged, maxhold or minhold selectable)
- FM offset (current value or averaged selectable)

The following settings are required on the FSP:

- Types of demodulation to be performed simultaneously (AM/FM)
- Sampling rate
- Record length
- Trigger source (free run/external)
- Pretrigger samples
- Number of measurements for average/maxhold/minhold

In addition, the required measurement results need to be configured for each type of demodulation. The FSP can simultaneously determine multiple types of demodulation with a maximum of 3 different result types. The following result types can be selected:

- WRITeThe current measurement results are determined.
- AVERAgeThe measurement results are averaged over a specified number of measurements
- MAXHoldThe maximum result values are determined over a specified number of measurements
- MINHoldThe minimum result values are determined over a specified number of measurements

In practice, the commands defined below are used as follows:

The instrument is set first. Then a measurement is started and the result list read in after synchronization to the end of the measurement. This method permits the control computer to be used for other tasks while the FSP is performing the measurement.

**Note:** *Analog demodulation is only available for screen A. Therefore, it is not permissible to enter "SENSe2..." for the commands of the SENSe:ADEMod subsystem.*

COMMAND	PARAMETERS	UNIT	COMMENT
[SENSe<1 2>] :ADEMod :AF			
:COUPling	AC   DC		
:CENTer	<numeric_value>	HZ	
:SPAN	<numeric_value>	HZ	
:FULL	--	--	
:STARt	<numeric_value>	HZ	
:STOP	<numeric_value>	HZ	
:BANDwidth			
:DEModulation	<numeric_value>	HZ	
:BWIDth			
:DEModulation	<numeric_value>	HZ	
:MTIMe	<numeric_value>	S	
:RLENgth?			query only
[:STATe]	<Boolean>		
:SET	<numeric_value>, <numeric_value>, IMMediate   EXTernal   IFPower   RFPower   AF   AM   AMRelative   FM   PM, POSitive   NEGative, <numeric_value>, <numeric_value>	HZ, --, --, --, --, --	
:SRATe?			query only
:ZOOM			
[:STATe]	<Boolean>		
:STARt	<numeric_value>	S	

**[SENSe:]ADEMod:AF:COUPLing AC | DC**

This command selects the coupling of the AF path.

**Example:** "ADEM:AF:COUP DC" ' Switch on DC coupling.

**Characteristics:** \*RST value: AC  
SCPI: device-specific

**[SENSe:]ADEMod:BANDwidth | BWIDth:DEModulation<numeric\_value>**

This command defines the demodulation bandwidth for analog demodulation. Depending on the selected demodulation bandwidth, the instrument selects the required sampling rate.

The available values of the demodulation bandwidths are defined by the sampling rates.

Demodulation bandwidth	Sampling rate	Comment
120 MHz	256 MHz	with FSQ-B72 only
50 MHz/ 85 MHz <sup>(1)</sup>	128 MHz	with FSQ-B72 only
30 MHz	64 MHz	with FSQ only
18 MHz	32 MHz	with FSQ only
10 MHz	32 MHz	
8 MHz	16 MHz	
5 MHz	8 MHz	
3 MHz	4 MHz	
1,6 MHz	2 MHz	
800 kHz	1 MHz	
400 kHz	500 kHz	
200 kHz	250 kHz	
100 kHz	125 kHz	
50 kHz	62.5 kHz	
25 kHz	31.25 kHz	
12.5 kHz	15.625 kHz	
6.4 kHz	7.8125 kHz	
3.2 kHz	3.90625 kHz	
1.6 kHz	1.953125 kHz	
800 Hz	976.5625 Hz	
400 Hz	488.28125 Hz	
200 Hz	244.140625 Hz	
100 Hz	122.0703125 Hz	

(1) The demodulation bandwidth at a sampling rate of 128 MHz depends on the center frequency that has been set. At a center frequency of ≈3.6 GHz, the demodulation bandwidth is 50 MHz; at higher center frequencies, it is 85 MHz.

**Example:** "ADEM:BAND:DEM 1MHz" Set test bandwidth to 1 MHz.

**Characteristics:** \*RST value: 5 MHz  
SCPI: device-specific

**[SENSe:]ADEMod:MTIME<numeric\_value>**

This command sets the measuring time for the analog demodulation.

**Example:** "ADEM:MTIM 62.5us" 'Set measurement time to 62.5  $\mu$ s.

**Characteristics:** \*RST value: 62.5us  
SCPI: device-specific

**[SENSe:]ADEMod:RLENgth?**

This command returns the currently set record length for the analog demodulation.

**Example:** "ADEM:RLEN?" Return the current record length.

**Characteristic:** \*RST value: -  
SCPI: device-specific

**[SENSe:]ADEMod:AF:SPAN <numeric\_value>**

This command sets the span for the display of the AF spectrum.

The span is limited to half the measurement bandwidth of analog demodulation (SENS:ADEM:BAND).

**Example:** "ADEM ON" 'Switch on FM demodulator  
"CALC:FEED XTIM:FM:AFSP" 'Set "FM AF spectrum" display  
or  
"CALC:FEED XTIM:RFP:AFSP" 'Switch on "AF spectrum of the  
'RF power signal" display  
"ADEM:BAND 5 MHz" 'Set meas. bandwidth to 5 MHz  
"ADEM:AF:CENT 500kHz" 'Set AF center frequency to 500 kHz  
"ADEM:AF:SPAN 200kHz" 'Set AF span to 200 kHz

**Characteristics:** \*RST value: 2.5 MHz  
SCPI: device-specific

**[SENSe:]ADEMod:AF:SPAN:FULL**

This command sets the maximum span for the display of the AF spectrum.

The maximum span corresponds to half the measurement bandwidth of analog demodulation (SENS:ADEM:BAND).

**Example:** "ADEM ON" 'Switch on FM demodulator  
"CALC:FEED XTIM:FM:AFSP" 'Switch on "FM AF spectrum" display  
or  
"CALC:FEED XTIM:RFP:AFSP" 'Switch on "AF spectrum of the  
'RF power signal" display  
"ADEM:BAND 5 MHz" 'Set meas. bandwidth to 5 MHz  
"ADEM:AF:SPAN:FULL" 'Set AF span to 2.5 MHz

**Characteristics:** \*RST value: -  
SCPI: device-specific

**[SENSe:]ADEMod:AF:CENTer** <numeric\_value>

This command sets the center frequency for the display of the AF spectrum.

**Example:** "ADEM ON" 'Switch on FM demodulator  
 "CALC:FEED XTIM:FM:AFSP 'Switch on "FM AF spectrum" display  
 or  
 "CALC:FEED XTIM:RFP:AFSP 'Switch on "AF spectrum of the  
 'RF power signal" display  
 "ADEM:BAND 5 MHz" 'Set meas. bandwidth to 5 MHz  
 "ADEM:AF:CENT 500kHz" 'Set AF center frequency to 500 kHz  
 "ADEM:AF:SPAN 200kHz" 'Set AF span to 200 kHz

**Characteristics:** \*RST value: 1.25 MHz  
 SCPI: device-specific

**[SENSe:]ADEMod:AF:START** <numeric\_value>

This command sets the start frequency for the display of the AF spectrum.

**Example:** "ADEM ON" 'Switch on FM demodulator  
 "CALC:FEED XTIM:FM:AFSP 'Switch on "FM AF spectrum" display  
 or  
 "CALC:FEED XTIM:RFP:AFSP 'Switch on "AF spectrum of the  
 'RF power signal" display  
 "ADEM:BAND 5 MHz" 'Set meas. bandwidth to 5 MHz  
 "ADEM:AF:STAR 0kHz" 'Set AF start frequency to 0 kHz  
 "ADEM:AF:STOP 500kHz" 'Set AF stop frequency to 500 kHz

**Characteristics:** \*RST value: 0 MHz  
 SCPI: device-specific

**[SENSe:]ADEMod:AF:STOP** <numeric\_value>

This command sets the stop frequency for the display of the AF spectrum.

The stop frequency is limited to half the measurement bandwidth of analog demodulation (SENS:ADEM:BAND).

**Example:** "ADEM ON" 'Switch on FM demodulator  
 "CALC:FEED XTIM:FM:AFSP 'Switch on "FM AF spectrum" display  
 or  
 "CALC:FEED XTIM:RFP:AFSP 'Switch on "AF spectrum of the  
 'RF power signal" display  
 "ADEM:BAND 5 MHz" 'Set meas. bandwidth to 5 MHz  
 "ADEM:AF:STAR 0kHz" 'Set AF start frequency to 0 kHz  
 "ADEM:AF:STOP 500kHz" 'Set AF stop frequency to 500 kHz

**Characteristics:** \*RST value: 2.5 MHz  
 SCPI: device-specific

**[SENSe:]ADEMod[:STATe]ON | OFF**

This command switches on the FM demodulator of the instrument. The instrument will be set to time-domain measurement (span = 0) at the current center frequency.

**Note:** *The measurement is always performed in screen A. Split-screen operation will be switched off as soon as the demodulator is activated.*

**Example:** "ADEM ON" Switch on the FM demodulator

**Characteristics:** \*RST value: OFF  
SCPI: device-specific

**[SENSe:]ADEMod:SET<sample rate>,<record length>,<trigger source>,<trigger slope>,<offset samples>,<# of meas>**

This command configures the FM demodulator of the FSP.

**Parameter:**

<sample rate>:	Frequency at which measured values are taken from the A/D converter and stored in I/Q memory. Value range: 122.0703125 Hz, 244.140625 Hz, 488.28125 Hz, 976.5625 Hz, 1.953125 kHz, 3.90625 kHz, 7.8125 kHz, 15.625 kHz, 31.25 kHz, 62.5 kHz, 125 kHz, 250 kHz, 500 kHz, 1 MHz, 2 MHz, 4 MHz, 8 MHz, 16 MHz, 32 MHz
<record length>:	Number of samples to be stored in I/Q memory. Value range: 1 to 130560 (128 * 1024 - 512)
<trigger source>:	Selection of the trigger source for the demodulator. Valid values: IMMEDIATE   EXTERNAL IFFPower   FM   AM   AMRelative   PM
<trigger slope>:	Trigger slope selected. Valid values: POSITIVE   NEGATIVE The value indicated here will be ignored for <trigger source> = IMMEDIATE.
<offset samples>:	Number of samples to be used as an offset to the trigger signal. Value range: -65024 to 130560 (= -64 * 1024 + 512 to 128 * 1024 - 512) The indicated value is ignored for <trigger source> = IMMEDIATE
<# of meas>:	Number of measurements. The value indicated here is particularly necessary for the AVERAGE/MAXHold/MINHold function. Value range: 0 to 32767

**Example:** ADEM:SET 8MHz,32000,EXT,POS,-500,30  
will perform a measurement with the following settings:

sample rate	= 8 MHz
record length	= 32000
trigger source	= EXTERNAL
trigger slope	= POSITIVE
offset samples	= -500 (= 500 samples before trigger occurs)
# of meas	= 30

**Characteristics:** \*RST values: sample rate= 8 MHz  
record length= 501  
trigger source = IMMEDIATE  
trigger slope = POSITIVE  
offset samples = 0  
# of meas = 0  
SCPI: device-specific



**[SENSe:]ADEMod:SRATe?**

This command returns the currently set sampling rate for the analog demodulation.

**Example:** "ADEM:SRAT?" Return the current sampling rate.

**Characteristics:** \*RST value: -  
SCPI: device-specific

**[SENSe:]ADEMod:ZOOM[:STATe>] ON | OFF**

This command switches the zoom function for the measurement data of the FM demodulator on or off. Depending on the selected measurement time and demodulation bandwidth, more measurement points are captured than can be shown on the display.

If the zoom function has been switched on, exactly 501 (FSP) or 625 (FSU and FSQ) measurement points from the measured value memory will be shown starting at the time defined with [SENSe:]ADEMod:ZOOM:START.

If the zoom function has been switched off, all measurement points will be compressed down to the number of points available on the display by means of data reduction.

**Example:** "ADEM:ZOOM ON" Switch on the zoom function.

**Characteristics:** \*RST value: OFF  
SCPI: device-specific

**[SENSe:]ADEMod:ZOOM:START 0 s to measurement time**

This command selects the start time for displaying the individual measurement values of the FM demodulator. The maximum value depends on the measurement time set in the instrument; this value can be queried with ADEM:ZOOM:START? MAX.

If the zoom function has been switched on, 501 (FSP) or 625 (FSU and FSQ) measurement points will be displayed starting at the time that has been set.

**Example:** "ADEM:ZOOM ON" Switch on zoom function  
"ADEM:ZOOM:STAR 500us" Set display starting point to 500  $\mu$ s

**Characteristics:** \*RST value: 0 s  
SCPI: device-specific

**[SENSe:]ADEMod:AM Subsystem**

COMMAND	PARAMETERS	UNIT	COMMENT
[SENSe<1 2>] :ADEMod :AM [:ABSolute] [:TDOMain] [:TYPE]	WRITe   AVERage   MAXHold   MINHold   VIEW   OFF, WRITe   AVERage   MAXHold   MINHold   VIEW   OFF, WRITe   AVERage   MAXHold   MINHold   VIEW   OFF		
:RESult?	WRITe   AVERage   MAXHold   MINHold		
:AFSPectrum [:TYPE]	WRITe   AVERage   MAXHold   MINHold   VIEW   OFF, WRITe   AVERage   MAXHold   MINHold   VIEW   OFF, WRITe   AVERage   MAXHold   MINHold   VIEW   OFF		
:RESult?	WRITe   AVERage   MAXHold   MINHold		
:RELative [:TDOMain] [:TYPE]	WRITe   AVERage   MAXHold   MINHold   VIEW   OFF, WRITe   AVERage   MAXHold   MINHold   VIEW   OFF, WRITe   AVERage   MAXHold   MINHold   VIEW   OFF		
:RESult?	WRITe   AVERage   MAXHold   MINHold		
:AFSPectrum [:TYPE]	WRITe   AVERage   MAXHold   MINHold   VIEW   OFF, WRITe   AVERage   MAXHold   MINHold   VIEW   OFF, WRITe   AVERage   MAXHold   MINHold   VIEW   OFF		
:RESult?	WRITe   AVERage   MAXHold   MINHold		

**SENSe:]ADEMod:AM[[:ABSolute]][:TDOMain]:TYPE] <result type 1>,<result type 2>,<result type 3>**

This command selects the result types to be measured in parallel by AM demodulation.

**Parameter:**

<result type 1/2/3>:

WRITe	The current measured values are recorded.
AVERAge	The measurement results are averaged over the specified number of measurements.
MAXHold	The maximum result over the specified number of measurements is obtained.
MINHold	The minimum result over the specified number of measurements is obtained.
VIEW	The measurement result is frozen on the display, i.e. it is not recalculated in further measurements.
OFF	The result type is not used.

**Notes:**

*Settings different from OFF can be assigned to only one result type at a time.*

*Together with other signals, a maximum of six traces can be activated simultaneously. For example, three FM and three PM result types can be activated simultaneously.*

*The AM demodulator is deactivated by setting all result types to OFF.*

**Examples:**

ADEM:AM	AVER,MAXH,MINH	Determine average, maximum and minimum value simultaneously
ADEM:AM	WRIT,OFF,OFF	Determine the current measured values only
ADEM:AM	OFF,OFF,OFF	Switch off the calculation of the RF signal in the time domain

<b>Characteristics:</b>	*RST values:	WRITe,OFF,OFF
	SCPI:	Device-specific

**[SENSe:]ADEMod:AM[:ABSolute][:TDOMain]:RESult?<result type>**

This command reads the result data obtained by AM demodulation depending on the type indicated as a parameter. The data format of the output data is defined by the FORMat command.

**Note:**

Traces cannot be queried when VIEW is active.

**Parameter:**

<result type>:

WRITe	The current measured values are recorded.
AVERage	The measurement results averaged over the specified number of measurements are obtained.
MAXHold	The maximum result is determined over the specified number of measurements.
MINHold	The minimum result is determined over the specified number of measurements.

**Note:**

The result type indicated must be one that was configured with the command [SENSe:]ADEMod:AM[:ABSolute][:TDOMain] [:TYPE]. Otherwise, a query error will be generated.

**Return values:****ASCII format (FORMat ASCII):**

In this case, the command will return a list of comma-separated values (CSV) of the measured values in floating point format. The output unit is dBm (logarithmic display) or V (linear display).

**Binary format (FORMat REAL,32):**

In this case, the command will return binary data (Definite Length Block Data according to IEEE 488.2), with each measured value formatted in 32-bit IEEE 754 floating point format. The response string will have the following structure:

```
#41024<value1><value2>...<value n>
```

with

```
#4          Number of digits in the following number of data bytes (= 4 in the example)
1024       Number of following data bytes (# of DataBytes, = 1024 in the example)
<value x>  4-byte floating point value
```

**Examples:**

```
ADEM:SET 8MHz,32000,EXT,POS,-500,30 'Set up demodulator parameters
ADEM:FAM AVER,MAXH,MINH 'Select results to measure
ADEM ON 'Switch on demodulator
INIT;*WAI 'Start measurement and wait for end
FORM ASC 'Select output format
ADEM:FM:RES? AVER 'Read average results
ADEM:FM:RES? MAXH 'Read MAXHold results
ADEM:FM:RES? MINH 'Read MINHold results
```

**Characteristics:** \*RST value: -  
SCPI: device-specific

**[SENSe:]ADEMod:AM[:ABSolute]:AFSPectrum[:TYPE]** <result type 1>,<result type 2>,<result type 3>

This command selects the AF spectrum result types of the RF signal in the time domain to be measured simultaneously.

**Parameters:** <result type 1/2/3>: WRITE The current measured values are recorded.  
 AVERage The measurement results are averaged over the specified number of measurements.  
 MAXHold The maximum result over the specified number of measurements is determined.  
 MINHold The minimum result over the specified number of measurements is determined.  
 VIEW The measurement result is frozen on the display, i.e. it is not recalculated in further measurements.  
 OFF The result type is not used.

**Note:**

*Settings different from OFF can be assigned to only one result type at a time.*

*Together with other signals, a maximum of six traces can be activated simultaneously. For example, three FM and three PM result types can be activated simultaneously.*

*If all result types are set to OFF, no AF spectrum of the RF signal in the time domain will be calculated.*

*The result type AF spectrum of the RF signal in the time domain cannot be activated simultaneously with other AF spectra.*

**Examples:**

ADEM:AM:AFSP	AVER,MAXH,MINH	Determine average, maximum and minimum simultaneously
ADEM:AM:AFSP	WRIT,OFF,OFF	Determine only the current measurement results
ADEM:AM:AFSP	OFF,OFF,OFF	Switch off calculation of the AF spectrum

**Characteristics:** \*RST values: OFF,OFF,OFF  
 SCPI: device-specific

**[SENSe:]ADEMod:AM[:ABSolute]:AFSPectrum:RESult? <result type>**

This command reads out the result data of the AF spectrum of the RF signal in the time domain for the specified result type. The format of the output data is defined using the FORMat command.

**Note:** *Traces cannot be queried when VIEW is active.*

**Parameters:** <result type>: WRITe The current measured values are returned.  
 AVERage The measurement results averaged over the specified number of measurements are returned.  
 MAXHold The maximum result over the specified number of measurements is returned.  
 MINHold The minimum result over the specified number of measurements is returned.

**Note:** *The specified result type must be one that was configured with the command [SENSe:]ADEMod:AM[:ABSolute]:AFSPectrum[:TYPE]. Otherwise, a query error will be generated.*

**Return values:****ASCII format (FORMat ASCII):**

In this case, the command will return a list of comma-separated values (CSV) of the measured values in floating point format. The output unit is dBm (logarithmic display) or V (linear display).

**Binary format (FORMat REAL,32):**

In this case, the command will return binary data (Definite Length Block Data according to IEEE 488.2), with each measured value formatted in 32-bit IEEE 754 floating point format. The response string will have the following structure:

#41024<value1><value2>...<value n>

where

#4 Number of digits in the following number of data bytes (= 4 in the example)

1024 Number of following data bytes (# of DataBytes = 1024 in the example)

<value x> 4-byte floating point value

**Examples:**

ADEM:SET 8MHz,32000,EXT,POS,-500,30	'Set demodulator
ADEM:FM AVER,MAXH,MINH	'Select FM results to be measured
ADEM:AM WRIT,OFF,OFF	'Select results of the RF signal to be measured in the time domain
	'measured in the time domain
ADEM:AM:AFSP WRIT,OFF,OFF	'Select the AF spectrum results of the RF signal to be measured in the time domain
	'domain
ADEM ON	'Switch on demodulator
INIT;*WAI	'Start measurement and wait for end
FORM ASC	'Select output format
ADEM:FM:RES? AVER	'Read FM average value result data
ADEM:FM:RES? MAXH	'Read FM MAXHold result data
ADEM:FM:RES? MINH	'Read FM MINHold result data
ADEM:AM:RES? WRIT	'Read current AM result data
ADEM:AM:AFSP:RES? WRIT	'Read current AF spectrum result data of the RF signal in the time domain
	'domain

**Characteristics:** \*RST value: -  
 SCPI: device-specific

**[SENSe:]ADEMod:AM:RELative[:TDOMain][:TYPE] <result type 1>,<result type 2>,<result type 3>**

This command selects the result types to be measured simultaneously in the case of AM demodulation.

**Parameter:**

<result type 1/2/3>:

WRITe	The current measured values are recorded.
AVERage	The measurement results are averaged over the specified number of measurements.
MAXHold	The maximum result over the specified number of measurements is determined.
MINHold	The minimum result over the specified number of measurements is determined.
VIEW	The measurement result is frozen on the display, i.e. it is not recalculated in further measurements.
OFF	The result type is not used.

**Notes:**

*Settings different from OFF can be assigned to only one result type at a time.*

*Together with other signals, a maximum of six traces can be activated simultaneously. For example, three FM and three PM result types can be activated simultaneously*

*If all result types are set to OFF, the AM demodulator will be switched off.*

**Examples:**

ADEM:AM:REL	AVER,MAXH,MINH	Determine average, maximum and minimum value simultaneously
ADEM:AM:REL	WRIT,OFF,OFF	Determine only the current measured values
ADEM:AM:REL	OFF,OFF,OFF	Switch off the AM demodulator

**Characteristics:** \*RST values: WRITe,OFF,OFF  
 SCPI: device-specific

**[SENSe:]ADEMod:AM:RELative[:TDOMain]:RESult?<result type>**

This command reads out the result data of the AM demodulation for the specified result type. The format of the output data is defined using the FORMat command.

**Note:** *Traces cannot be queried when VIEW is active.*

<result type>:

WRITe	The current measured values are returned.
AVERAge	The measurement results averaged over the specified number of measurements are returned.
MAXHold	The maximum result over the specified number of measurements is returned.
MINHold	The minimum result over the specified number of measurements is returned.

**Note:** *The specified result type must be one that was configured with the command [SENSe:]ADEMod:AM:RELative[:TDOMain][:TYPE]. Otherwise, a query error will be generated.*

**Return values:****ASCII format (FORMat ASCII):**

In this case, the command will return a list of comma-separated values (CSV) of the measured values in floating point format. The output unit is %.

**Binary format (FORMat REAL,32):**

In this case, the command will return binary data (Definite Length Block Data according to IEEE 488.2), with each measured value formatted in 32-bit IEEE 754 floating point format. The response string will have the following structure:

#41024<value1><value2>...<value n>

where

#4            Number of digits in the following number of data bytes (= 4 in the example)  
 1024        Number of following data bytes (# of DataBytes = 1024 in the example)  
 <value x>   4-byte floating point value

**Examples:**

```

ADEM:SET 8MHz,32000,EXT,POS,-500,30 'Set demodulator
ADEM:FM AVER,MAXH,MINH 'Select FM results to be measured
ADEM:AM:REL WRIT,OFF,OFF 'Select AM results to be measured
ADEM ON 'Switch on demodulator
INIT;*WAI 'Start measurement and wait for end
FORM ASC 'Select output format
ADEM:FM:RES? AVER 'Read FM average result data
ADEM:FM:RES? MAXH 'Read FM MAXHold result data
ADEM:FM:RES? MINH 'Read FM MINHold result data
ADEM:AM:REL:RES? WRIT 'Read current AM result data
  
```

**Characteristics:** \*RST value: -  
 SCPI: device-specific



**[SENSe:]ADEMod:AM:RELative:AFSPectrum[:TYPE]** <result type 1>,<result type 2>,<result type 3>

This command selects the AF spectrum result types of the AM-demodulated signal to be measured simultaneously.

<b>Parameter:</b>	<result type 1/2/3>:	
	WRITe	The current measured values are recorded.
	AVERage	The measurement results are averaged over the specified number of measurements.
	MAXHold	The maximum result over the specified number of measurements is determined.
	MINHold	The minimum result over the specified number of measurements is determined.
	VIEW	The measurement result is frozen on the display, i.e. it is not recalculated in further measurements.
	OFF	The result type is not used.

**Notes:**

*Settings different from OFF can be assigned to only one result type at a time.*

*Together with other signals, a maximum of six traces can be activated simultaneously. For example, three FM and three PM result types can be activated simultaneously.*

*If all result types are set to OFF, no AF spectrum of the AM-demodulated signal will be calculated.*

*The result type AF spectrum of the AM-demodulated signal cannot be activated simultaneously with other AF spectra.*

**Examples:**

ADEM:AM:REL:AFSP	AVER,MAXH,MINH	Determine average, maximum and minimum value simultaneously
ADEM:AM:REL:AFSP	WRIT,OFF,OFF	Determine only the current measured values
ADEM:AM:REL:AFSP	OFF,OFF,OFF	Switch off calculation of the AF spectrum

**Characteristics:** \*RST values: OFF,OFF,OFF  
SCPI: device-specific

**[SENSe:]ADEMod:AM:RELative:AFSPectrum:RESult?** <result type>

This command reads out the result data of the AF spectrum of the AM-demodulated signal for the specified result type. The format of the output data is defined using the FORMat command.

**Note:** *Traces cannot be queried when VIEW is active.*

**Parameter:** <result type>: WRITE The current measured values are returned.  
 AVERage The measurement results averaged over the specified number of measurements are returned.  
 MAXHold The maximum result over the specified number of measurements is returned.  
 MINHold The minimum result over the specified number of measurements is returned.

**Note:** *The specified result type must be one that was configured with the command [SENSe:]ADEMod:AM:RELative:AFSPectrum[:TYPE]. Otherwise, a query error will be generated.*

**Return values:****ASCII format (FORMat ASCII):**

In this case, the command will return a list of comma-separated values (CSV) of the measured values in floating point format. The output unit is dBm (logarithmic display) or % (linear display).

**Binary format (FORMat REAL,32):**

In this case, the command will return binary data (Definite Length Block Data according to IEEE 488.2), with each measured value formatted in 32-bit IEEE 754 floating point format. The response string will have the following structure:

#41024<value1><value2>...<value n>

where

#4 Number of digits in the following number of data bytes (= 4 in the example)

1024 Number of following data bytes (# of DataBytes = 1024 in the example)

<value x> 4-byte floating point value

**Examples:**

ADEM:SET 8MHz,32000,EXT,POS,-500,30	'Set demodulator
ADEM:FM AVER,MAXH,MINH	'Select the FM results to be measured
ADEM:AM:REL WRIT,OFF,OFF	'Select the AM results to be measured
ADEM:AM:REL:AFSP WRIT,OFF,OFF	'Select the AF spectrum results of the demodulated AM signal to be measured
ADEM ON	'Switch on demodulator
INIT;*WAI	'Start measurement and wait for end
FORM ASC	'Select output format
ADEM:FM:RES? AVER	'Read FM average value result data
ADEM:FM:RES? MAXH	'Read FM MAXHold result data
ADEM:FM:RES? MINH	'Read FM MINHold result data
ADEM:AM:REL:RES? WRIT	'Read current AM result data
ADEM:AM:REL:AFSP:RES? WRIT	'Read current AF spectrum result data of the demodulated AM signal

**Characteristics:** \*RST value: -  
 SCPI: device-specific

**[SENSe:]ADEMod:FM Subsystem**

COMMAND	PARAMETERS	UNIT	COMMENT
[SENSe<1 2>] :ADEMod :FM [:TDOMain] [:TYPE]  :REsult?  :AFSPectrum [:TYPE]  :REsult?  :OFFSet?	   WRITe   AVERAge   MAXHold   MINHold   VIEW   OFF, WRITe   AVERAge   MAXHold   MINHold   VIEW   OFF, WRITe   AVERAge   MAXHold   MINHold   VIEW   OFF  WRITe   AVERAge   MAXHold   MINHold  WRITe   AVERAge   MAXHold   MINHold   VIEW   OFF, WRITe   AVERAge   MAXHold   MINHold   VIEW   OFF, WRITe   AVERAge   MAXHold   MINHold   VIEW   OFF  WRITe   AVERAge   MAXHold   MINHold  IMMediate   AVERAge		

**[SENSe:]ADEMod:FM[:TDOMain] [:TYPE]<result type 1>,<result type 2>,<result type 3>**

This command selects the result types to be created in parallel by FM demodulation.

**Parameters:**

<result type 1/2/3>:

WRITe	The current measured values are recorded.
AVERAge	The measurement results are averaged over the specified number of measurements.
MAXHold	The maximum result is determined over the specified number of measurements.
MINHold	The minimum result is determined over the specified number of measurements.
VIEW	The measurement result is frozen on the display, i.e. it is not recalculated in further measurements.
OFF	The result type is not used.

**Notes:**

*Settings different from OFF can be assigned to only one result type at a time.*

*Together with other signals, a maximum of six traces can be activated simultaneously. For example, three FM and three PM result types can be activated simultaneously.*

*The FM demodulator is deactivated by setting all result types to OFF.*

**Examples:**

ADEM:FM AVER,MAXH,MINH	Determine average, maximum and minimum value simultaneously
ADEM:FM WRIT,OFF,OFF	Determine only the current measurement result
ADEM:FM OFF,OFF,OFF	Switch off the FM demodulator

**Characteristics:** \*RST values: WRITe,OFF,OFF  
SCPI: device-specific

**[SENSe:]ADEMod:FM[:TDOMain]:RESult?<result type>**

This command reads the result data obtained by FM demodulation depending on the type indicated as a parameter. The data format of the output data is defined by the FORMat command.

**Note:** *Traces cannot be queried when VIEW is active.*

**Parameter:**

<result type>:

WRITe	The current trace data is recorded.
AVERage	The measurement results averaged over the specified number of measurements are obtained.
MAXHold	The maximum result is determined over the specified number of measurements.
MINHold	The minimum result is determined over the specified number of measurements.

**Note:**

*The specified result type must be one that was configured with the command [SENSe:]ADEMod:FM[:TYPE]. Otherwise, a query error will be generated.*

**Return values:****ASCII format (FORMat ASCII):**

In this case, the command will return a list of comma-separated values (CSV) of the measured values in floating point format. The output unit is Hz.

**Binary format (FORMat REAL,32):**

In this case, the command will return binary data (Definite Length Block Data according to IEEE 488.2), with each measured value formatted in 32-bit IEEE 754 floating point format. The response string will have the following structure:

#41024<value1><value2>...<value n>

with

#4           Number of digits (= 4 in the example) of the following number of data bytes

1024         Number of following data bytes (# of DataBytes = 1024 in the example)

<value x>   4-byte floating point value

**Examples:**

```

ADEM:SET 8MHZ,32000,EXT,POS,-500,30      'Set demodulator 'parameters
ADEM:FM AVER,MAXH,MINH                   'Select FM results to measure
ADEM:AM WRIT,OFF,OFF                     'Select AM results to measure
ADEM ON                                  'Switch on demodulator
INIT;*WAI                                'Start measurement and wait
                                           'for end

FORM ASC                                  'Select output format
ADEM:FM:RES? AVER                         'Read FM average results
ADEM:FM:RES? MAXH                         'Read FM MAXHold results
ADEM:FM:RES? MINH                         'Read FM MINHold result data
ADEM:AM:RES? WRIT                         'Read current AM results

```

**Characteristics:** \*RST value: -  
SCPI: device-specific

**[SENSe:]ADEMod:FM:AFSPectrum[:TYPE]** <result type 1>,<result type 2>,<result type 3>

This command selects the AF spectrum result types of the FM-demodulated signal to be measured simultaneously.

<b>Parameter:</b>	<result type 1/2/3>:	
	WRITE	The current measured values are recorded.
	AVERage	The measurement results are averaged over the specified number of measurements.
	MAXHold	The maximum result over the specified number of measurements is determined.
	MINHold	The minimum result over the specified number of measurements is determined.
	VIEW	The measurement result is frozen on the display, i.e. it is not recalculated in further measurements.
	OFF	The result type is not used.

**Notes:**

*Settings different from OFF can be assigned to only one result type at a time.*

*Together with other signals, a maximum of six traces can be activated simultaneously. For example, three FM and three PM result types can be activated simultaneously.*

*If all result types are set to OFF, no AF spectrum of the FM-demodulated signal will be calculated.*

*The result type AF spectrum of the FM-demodulated signal cannot be activated simultaneously with other AF spectra.*

**Examples:**

ADEMod:FM:AFSP	AVER,MAXH,MINH	Determine average, maximum and minimum value simultaneously
ADEMod:FM:AFSP	WRIT,OFF,OFF	Determine only the current measured values
ADEMod:FM:AFSP	OFF,OFF,OFF	Switch off calculation of the AF spectrum

**Characteristics:** \*RST values: OFF,OFF,OFF  
SCPI: device-specific

**[SENSe:]ADEMod:FM:AFSPectrum:RESult?** <result type>

This command reads out the result data of the AF spectrum of the FM-demodulated signal for the specified result type. The format of the output data is defined using the FORMat command.

**Note:**

*Traces cannot be queried when VIEW is active.*

<b>Parameter:</b>	<result type>:	
	WRITE	The current measured values are returned.
	AVERage	The measurement results averaged over the specified number of measurements are returned.
	MAXHold	The maximum result over the specified number of measurements is returned.
	MINHold	The minimum result over the specified number of measurements is returned.

**Note:**

*The specified result type must be one that was configured with the command [SENSe:]ADEMod:FM:AFSPectrum[:TYPE]. Otherwise, a query error will be generated.*

**Return values:****ASCII format (FORMat ASCII):**

In this case, the command will return a list of comma-separated values (CSV) of the measured values in floating point format. The output unit is dBm (logarithmic display) or V (linear display).

**Binary format (FORMat REAL,32):**

In this case, the command will return binary data (Definite Length Block Data according to IEEE 488.2), with each measured value formatted in 32-bit IEEE 754 floating point format. The response string will have the following structure:

#41024<value1><value2>...<value n>

where

#4            Number of digits in the following number of data bytes (= 4 in the example)

1024        Number of following data bytes (# of DataBytes = 1024 in the example)

<value x>   4-byte floating point value

**Examples:**

ADEM:SET 8MHz,32000,EXT,POS,-500,30	'Set demodulator
ADEM:FM AVER,MAXH,MINH	'Select FM results to be measured
ADEM:AM:REL WRIT,OFF,OFF	'Select AM results to be measured
ADEM:FM:AFSP WRIT,OFF,OFF	'Select AF spectrum results of the demodulated FM signal to be measured
ADEM ON	'Switch on demodulator
INIT;*WAI	'Start measurement and wait for end
FORM ASC	'Select output format
ADEM:FM:RES? AVER	'Read FM average result data
ADEM:FM:RES? MAXH	'Read FM MAXHold result data
ADEM:FM:RES? MINH	'Read FM MINHold result data
ADEM:AM:RES? WRIT	'Read current AM result data
ADEM:FM:AFSP:RES? WRIT	'Read current AF spectrum result data of the demodulated FM signal

**Characteristics:**    \*RST value:    -  
                              SCPI:                    device-specific

**[SENSe:]ADEMod:FM:OFFSet?<result type>**

This command calculates the FM offset of the current measured data set.

If averaging has been activated prior to data acquisition (using the command [SENSe:]ADEMod:FM[:TYPE]), the average FM offset can also be obtained by setting <result type> = AVERAge. The average FM offset obtained in this way differs from the one calculated by CALC:MARK:FUNC:ADEM:FERR?, since, for determination of the frequency deviation, the modulation is removed by means of lowpass filtering, producing results that are different from those obtained by averaging.

**Parameters:**

<result type>:

IMMediate	The current measurement results are used for calculating the FM offset.
AVERAge	The measurement results averaged over the specified number of measurements are used for calculation of the FM offset.

**Notes:**

*If no average measurement has been active during the last measurement sequence, only the command [SENSe:]ADEMod:FM:OFFSet? IMMEDIATE will return a valid result (data to calculate the FM offset are taken from the last measured data set).*

*[SENSe:]ADEMod:FM:OFFSet? AVERAge will cause a query error in this case.*

**Example:**

```

ADEM:SET 8MHz,32000,EXT,POS,-500,30      'Set demodulator to perform
                                          '30 measurements

ADEM:FM AVER,OFF,OFF                     'Set FM results to perform
                                          'averaging

ADEM:AM OFF,OFF,OFF                       'Switch off AM demodulation

ADEM ON                                   'Switch on FM demodulator

INIT;*WAI                                 'Start measurement and wait
                                          'for end

ADEM:FM:OFFS? IMM                        'Read FM offset of last
                                          'measurement of the sequence
                                          'of 30

ADEM:FM:OFFS? AVER                       'Read FM offset averaged
                                          'over 30 measurements

```

**Characteristics:** \*RST value: -

SCPI: device-specific

**[SENSe:]ADEMod:PM Subsystem**

COMMAND	PARAMETERS	UNIT	COMMENT
[SENSe<1 2>] :ADEMod :PM [:TDOMain] [:TYPE]	WRITe   AVERAge   MAXHold   MINHold   VIEW   OFF, WRITe   AVERAge   MAXHold   MINHold   VIEW   OFF, WRITe   AVERAge   MAXHold   MINHold   VIEW   OFF		
:RESult?	WRITe   AVERAge   MAXHold   MINHold		
:AFSPectrum [:TYPE]	WRITe   AVERAge   MAXHold   MINHold   VIEW   OFF, WRITe   AVERAge   MAXHold   MINHold   VIEW   OFF, WRITe   AVERAge   MAXHold   MINHold   VIEW   OFF		
:RESult?	WRITe   AVERAge   MAXHold   MINHold		
:OFFSet?	IMMediate   AVERAge		

**[SENSe:]ADEMod:PM[:TDOMain] [:TYPE]<result type 1>,<result type 2>,<result type 3>**

This command selects the result types to be created in parallel by PM demodulation.

**Parameters:**

<result type 1/2/3>:

WRITe	The current measured values are recorded.
AVERAge	The measurement results are averaged over the specified number of measurements.
MAXHold	The maximum result is determined over the specified number of measurements.
MINHold	The minimum result is determined over the specified number of measurements.
VIEW	The measurement result is frozen on the display, i.e. it is not recalculated in further measurements.
OFF	The result type is not used.

**Notes:**

*Settings different from OFF can be assigned to only one result type at a time.*

*Together with other signals, a maximum of six traces can be activated simultaneously. For example, three PM and three PM result types can be activated simultaneously.*

*The PM demodulator is deactivated by setting all result types to OFF.*

**Examples:**

ADEM:PM AVER,MAXH,MINH Determine average, maximum and minimum value simultaneously  
 ADEM:PM WRIT,OFF,OFF Determine only the current measurement result  
 ADEM:PM OFF,OFF,OFF Switch off the PM demodulator

**Characteristics:** \*RST values: WRITe,OFF,OFF  
 SCPI: device-specific



**[SENSe:]ADEMod:PM[:TDOMain]:RESult?<result type>**

This command reads the result data obtained by PM demodulation depending on the type indicated as a parameter. The data format of the output data is defined by the FORMat command.

**Note:** *Traces cannot be queried when VIEW is active.*

**Parameter:**

<result type>:

WRITe	The current trace data is recorded.
AVERage	The measurement results averaged over the specified number of measurements are obtained.
MAXHold	The maximum result is determined over the specified number of measurements.
MINHold	The minimum result is determined over the specified number of measurements.

**Note:** *The specified result type must be one that was configured with the command [SENSe:]ADEMod:PM[:TYPE]. Otherwise, a query error will be generated.*

**Return values:****ASCII format (FORMat ASCII):**

In this case, the command will return a list of comma-separated values (CSV) of the measured values in floating point format. The output unit depends on the unit selected - either RAD or DEG.

**Binary format (FORMat REAL,32):**

In this case, the command will return binary data (Definite Length Block Data according to IEEE 488.2), with each measured value formatted in 32-bit IEEE 754 floating point format. The response string will have the following structure:

```
#41024<value1><value2>...<value n>
```

with

#4           Number of digits (= 4 in the example) of the following number of data bytes

1024        Number of following data bytes (# of DataBytes = 1024 in the example)

<value x>   4-byte floating point value

**Examples:**

```
ADEM:SET 8MHz,32000,EXT,POS,-500,30   'Set demodulator 'parameters
ADEM:PM AVER,MAXH,MINH               'Select PM results to measure
ADEM:AM WRIT,OFF,OFF                 'Select AM results to measure
ADEM ON                               'Switch on demodulator
INIT;*WAI                             'Start measurement and wait
                                      'for end

FORM ASC                             'Select output format
ADEM:PM:RES? AVER                    'Read PM average results
ADEM:PM:RES? MAXH                   'Read PM MAXHold results
ADEM:PM:RES? MINH                   'Read PM MINHold result data
ADEM:AM:RES? WRIT                   'Read current AM results
```

**Characteristics:** \*RST value: -  
SCPI: device-specific

**[SENSe:]ADEMod:PM:AFSPectrum[:TYPE]** <result type 1>,<result type 2>,<result type 3>

This command selects the AF spectrum result types of the PM-demodulated signal to be measured simultaneously.

<b>Parameter:</b>	<result type 1/2/3>:	
	WRITE	The current measured values are recorded.
	AVERage	The measurement results are averaged over the specified number of measurements.
	MAXHold	The maximum result over the specified number of measurements is determined.
	MINHold	The minimum result over the specified number of measurements is determined.
	VIEW	The measurement result is frozen on the display, i.e. it is not recalculated in further measurements.
	OFF	The result type is not used.

**Notes:**

*Settings different from OFF can be assigned to only one result type at a time.*

*Together with other signals, a maximum of six traces can be activated simultaneously. For example, three PM and three PM result types can be activated simultaneously.*

*If all result types are set to OFF, no AF spectrum of the PM-demodulated signal will be calculated.*

*The result type AF spectrum of the PM-demodulated signal cannot be activated simultaneously with other AF spectra.*

**Examples:**

ADEM:PM:AFSP	AVER,MAXH,MINH	Determine average, maximum and minimum value simultaneously
ADEM:PM:AFSP	WRIT,OFF,OFF	Determine only the current measured values
ADEM:PM:AFSP	OFF,OFF,OFF	Switch off calculation of the AF spectrum

**Characteristics:** \*RST values: OFF,OFF,OFF  
SCPI: device-specific

**[SENSe:]ADEMod:PM:AFSPectrum:RESult?** <result type>

This command reads out the result data of the AF spectrum of the PM-demodulated signal for the specified result type. The format of the output data is defined using the FORMat command.

**Note:**

*Traces cannot be queried when VIEW is active.*

<b>Parameter:</b>	<result type>:	
	WRITE	The current measured values are returned.
	AVERage	The measurement results averaged over the specified number of measurements are returned.
	MAXHold	The maximum result over the specified number of measurements is returned.
	MINHold	The minimum result over the specified number of measurements is returned.

**Note:**

*The specified result type must be one that was configured with the command [SENSe:]ADEMod:PM:AFSPectrum[:TYPE]. Otherwise, a query error will be generated.*



**[SENSe:]ADEMod:SPECTrum - Subsystem**

COMMAND	PARAMETERS	UNIT	COMMENT
[SENSe<1 2>] :ADEMod :SPECTrum :BANDwidth [:RESolution] :BWIDth [:RESolution] :SPAN [:MAXimum] :ZOOM [:TYPE]  :RESult?	<numeric_value>       WRITe   AVERage   MAXHold   MINHold   VIEW   OFF, WRITe   AVERage   MAXHold   MINHold   VIEW   OFF, WRITe   AVERage   MAXHold   MINHold   VIEW   OFF WRITe   AVERage   MAXHold   MINHold	HZ       HZ HZ HZ HZ	Option FM-Demodulator

**[SENSe:]ADEMod:SPECTrum:BANDwidth|BWIDth[:RESolution]** 1 Hz to 10 MHz

This command sets the resolution bandwidth for spectrum representation that was determined from the analog demodulation data.

The recording time required is calculated from the and the sampling rate indirectly set via ADEM:SPEC:SPAN:MAX or ADEM:BAND. If the available recording time is not sufficient for the given bandwidth, the recording time is set to its maximum and the resolution bandwidth is enlarged to the resulting bandwidth.

**Example:**

"ADEM ON"	' Switches on the FM demodulator
"CALC:FEED XTIM:SPEC"	' Switches on the result display RF spectrum
or	
"CALC:FEED XTIM:FM:AFSP"	' Switches on the result display AF spectrum 'of FM
or	
"CALC:FEED XTIM:RFP:AFSP"	' Switches on the result display AF spectrum 'of RF power signal
"ADEM:BAND:RES 61.2kHz"	' Sets the resolution bandwidth to 61.2 kHz.

**Characteristics:**

*RST value:	61.2 kHz
SCPI:	device-specific

**[SENSe:]ADEMod:SPECTrum:SPAN[:MAXimum]** <numeric\_value>

This command sets the maximum frequency range for displaying the RF spectrum that was determined from the FM demodulation data. The maximum span corresponds to the measurement bandwidth of analog demodulation (SENS:ADEM:BAND).

Demodulation bandwidth	Sampling rate	Comment
120 MHz	256 MHz	with FSQ-B72 only
50 MHz/85 MHz <sup>(1)</sup>	128 MHz	with FSQ-B72 only
30 MHz	64 MHz	with FSQ only
18 MHz	32 MHz	with FSQ only
10 MHz	32 MHz	
8 MHz	16 MHz	
5 MHz	8 MHz	
3 MHz	4 MHz	
1,6 MHz	2 MHz	
800 kHz	1 MHz	
400 kHz	500 kHz	
200 kHz	250 kHz	
100 kHz	125 kHz	
50 kHz	62.5 kHz	
25 kHz	31.25 kHz	
12.5 kHz	15.625 kHz	
6.4 kHz	7.8125 kHz	
3.2 kHz	3.90625 kHz	
1.6 kHz	1.953125 kHz	
800 Hz	976.5625 Hz	
400 Hz	488.28125 Hz	
200 Hz	244.140625 Hz	
100 Hz	122.0703125 Hz	

(1) The demodulation bandwidth at a sampling rate of 128 MHz depends on the center frequency that has been set. At a center frequency of =3.6 GHz, the demodulation bandwidth is 50 MHz; at higher center frequencies, it is 85 MHz.

**Example:**

"ADEM ON"	'Switches on the FM demodulator
"CALC:FEED 'XTIM:SPEC'"	'Switches on result display RF spectrum
"ADEM:SPEC:SPAN:MAX 5 MHz"	'Sets the max. span to 5 MHz
"ADEM:SPEC:SPAN:ZOOM 1 MHz"	'Sets the displayed span to 1 MHz

**Characteristics:** \*RST value: 5 MHz  
SCPI: device-specific

**[SENSe:]ADEMod:SPECTrum:SPAN:ZOOM <numeric\_value>**

This command sets the frequency range for result display of RF spectrum determined from FM demodulation data. The frequency range for result display is limited to the maximum span (SENS:ADEM:SPEC:SPAN:MAX) or to the measurement bandwidth of analog demodulation (SENS:ADEM:BAND).

**Example:**

"ADEM ON"	'Switches on the FM demodulator
"CALC:FEED XTIM:SPEC"	'Switches on result display RF spectrum'
"ADEM:SPEC:SPAN:MAX 5 MHz"	'Sets the maximum span to 5 MHz
"ADEM:SPEC:SPAN:ZOOM 1 MHz"	'Sets displayed span to 1 MHz

**Characteristics:** \*RST value: 5 MHz  
SCPI: device-specific

**[SENSe:]ADEMod:SPECTrum[:TYPE] <result type 1>,<result type 2>,<result type 3>**

This command selects the result types to be created in parallel by the RF SPECTrum measurement with active analog demodulation.

**Parameters:** <result type 1/2/3>.: WRITE The current measurement results will be obtained  
AVERage The measurement results will be averaged over the given # of measurements  
MAXHold The maximum result values will be obtained over the given # of measurements  
MINHold The minimum result values will be obtained over the given # of measurements  
VIEW The measurement results are frozen and displayed, i.e. they are not calculated for subsequent measurements.  
OFF The result type will not be used.

**Notes:**

*Each value besides OFF can only be assigned to one result type at a time.*

*Together with other signals, a maximum of six traces can be activated simultaneously. For example, three FM and three PM result types can be activated simultaneously.*

*If all result types are set to OFF, switch off calculation of the AF spectrum*

**Examples:** ADEM:SPEC AVER,MAXH,MINH 'Creates average, max hold and min hold values at a time  
ADEM:SPEC WRIT,OFF,OFF 'Only creates the current measurement values  
ADEM:SPEC OFF,OFF,OFF 'Switches FM demodulation off

**Characteristics:** \*RST values: OFF,OFF,OFF  
SCPI: device-specific

**[SENSe:]ADEMod:SPECTrum:RESult? <result type>**

This command reads the result data obtained by RF SPECTrum measurement depending on the type indicated as a parameter. The data format of the output data block is defined by the FORMat command.

**Note:** *It is not possible to read out trace data when result type VIEW is selected.*

**Parameters:** <result type>:

WRITe	The current measurement results will be obtained
AVERAge	The measurement results will be averaged over the given # of measurements
MAXHold	The maximum result values will be obtained over the given # of measurements
MINHold	The minimum result values will be obtained over the given # of measurements

**Notes:**

*The result type indicated must be one of those configured by [SENSe:]ADEMod:SPEC[:TYPE]. Otherwise a query error will be generated.*

**Return Values:****ASCII Format (FORMat ASCII):**

In this case the command will yield a list of comma separated values (CSV) of the measured values in floating point format. The output unit is dBm.

**Binary Format (FORMat REAL,32):**

In this case the command will yield binary data (Definite Length Block Data according to IEEE 488.2), each measurement value being formatted in 32 Bit IEEE 754 Floating-Point-Format. The schematics of the result string will be as follows:

#41024<value1><value2>...<value n>

with

#4            number of digits (= 4 in the example) of the following number of data bytes

1024        number of following data bytes (= 1024 in the example)

<value x>   4-Byte-Floating Point Value

**Examples:**

ADEM:SET 8MHz,32000,EXT,POS,-500,30	'Sets up demodulator parameters
ADEM:SPEC AVER,MAXH,MINH	'Sets up RF spectrum results
	'to measure
ADEM:SPEC WRIT,OFF,OFF	'Sets up AM results to measure
ADEM ON	'Switches on demodulator
INIT;*WAI	'Starts measurement and waits
	'for sync
FORM ASC	'Selects output format
ADEM:SPEC:RES? AVER	'Reads RF spectrum average
	'results
ADEM:SPEC:RES? MAXH	'Reads RF spectrum max hold
	'results
ADEM:SPEC:RES? MINH	'Reads RF spectrum min hold
	'results
ADEM:SPEC:RES? WRIT	'Reads spectrum current results

**Characteristics:** \*RST values: -  
SCPI: device-specific

## SENSe:BANDwidth Subsystem

This subsystem controls the setting of the analyzer's filter bandwidths. Both groups of commands (BANDwidth and BWIDth) perform the same functions.

COMMAND	PARAMETERS	UNIT	COMMENT
[SENSe<1 2>] :BANDwidth			
[:RESolution]	<numeric_value>	HZ	r
:AUTO	<Boolean>	--	
:DEMod	<numeric_value>	HZ	
:BWIDth			
[:RESolution]	<numeric_value>	HZ	
:AUTO	<Boolean>	--	
:DEMod	<numeric_value>	HZ	

**[SENSe<1|2>:]BANDwidth|BWIDth[:RESolution] <numeric\_value>**

This command sets the IF bandwidth of the demodulator.

Analog resolution filters are available that are implemented as LC filters with four circuits (FSP) or 5 circuits (FSU/FSQ).

Instrument	IF bandwidth	Steps
FSP	300 kHz to 10 MHz	1,3,10
FSU	200 kHz to 10 MHz	1,2,3,5,10
FSQ	200 kHz to 50 MHz	1,2,3,5,10

If the resolution bandwidth is modified, coupling to the demodulation bandwidth is automatically switched off.

**Example:** "BAND 1MHz" Set IF bandwidth to 1 MHz

**Characteristics:** \*RST value: - (AUTO is set to ON)  
SCPI: conforming



**[SENSe<1|2>:]BANDwidth|BWIDth[:RESolution]:AUTO ON | OFF**

This command automatically couples the IF bandwidth to the demodulation bandwidth ( $BW_{RBW} = 10 * BW_{Demod}$ ).

**Example:** "BAND:AUTO OFF" Switch off coupling of the IF bandwidth to the demodulation bandwidth

**Characteristics:** \*RST value: ON  
SCPI: conforming

**[SENSe<1|2>:]BANDwidth|BWIDth:DEMod <numeric\_value>**

This command sets the bandwidth for analog demodulation. Depending on the selected demodulation bandwidth, the instrument selects the required sampling rate.

The available values of the demodulation bandwidths are determined by the sampling rates.

Rounded off demodulation bandwidth	Sampling rate	Comment
120 MHz	256 MHz	with FSQ-B72 only
50/85 MHz <sup>(1)</sup>	128 MHz	with FSQ-B72 only
30 MHz	64 MHz	with FSQ only
18 MHz	32 MHz	with FSQ only
10 MHz	32 MHz	
8 MHz	16 MHz	
5 MHz	8 MHz	
3 MHz	4 MHz	
1.6 MHz	2 MHz	
800 kHz	1 MHz	
400 kHz	500 kHz	
200 kHz	250 kHz	
100 kHz	125 kHz	
50 kHz	62.5 kHz	
25 kHz	31.25 kHz	
12.5 kHz	15.625 kHz	
6.4 kHz	7.8125 kHz	
3.2 kHz	3.90625 kHz	
1.6 kHz	1.953125 kHz	
800 Hz	976.5625 Hz	
400 Hz	488.28125 Hz	
200 Hz	244.140625 Hz	
100 Hz	122.0703125 Hz	

(1) The demodulation bandwidth at a sampling rate of 128 MHz depends on the center frequency that has been set. At a center frequency of =3.6 GHz, the demodulation bandwidth is 50 MHz; at higher center frequencies, it is 85 MHz

**Example:** "ADEM:BAND:DEM 1MHz" Set test bandwidth to 1 MHz

**Characteristics:** \*RST value: 5 MHz  
SCPI: device-specific

## TRACe Subsystem

The TRACe subsystem controls access to the instrument's internal trace memory.

COMMAND	PARAMETERS	UNIT	COMMENT
TRACe<1 2> [:DATA]	TRACE1 TRACE2 TRACE3 TRACE4, <block> <numeric_value>...	-	

**TRACe<1|2>[:DATA]** TRACE1| TRACE2| TRACE3, <block> | <numeric\_value>

This command transfers trace data from the control computer to the instrument, the query reads trace data out of the instrument.

**Note:**

With active FM Demodulator (option FS-K7), only the trace data that are displayed are read out and reloaded. Part of the measured data that can be queried with the marker, however, is derived from the raw data. These measurement results are no longer available after reloading a trace, the query commands cause a query error.

**Example:** "TRAC TRACE1,"+A\$ (A\$: Data list in current format)  
"TRAC2? TRACE1"

**Return values:**

Scaling of the data is in the currently set level unit.

**ASCII format (FORMat ASCII):**

In this case, the command will return a list of comma separated values (CSV) of the measured values.

The number of test points is 501 (FSP) or 625 (FSU/FSQ).

**Binary format (FORMat REAL,32):**

In this case, the command returns binary data (Definite Length Block Data according to IEEE 488.2), with the measured values arranged in subsequent lists of I and Q data in 32-bit IEEE 754 floating point format. The response string will have the following structure:

FSP: #42004<meas value 1><meas value value2>...<meas value 501>

FSU/FSQ: #42500<meas value 1><meas value value2>...<meas value 625>

with

#4 Number of digits in the following number of data bytes (= 4 in the example)

2004/2005 Number of the following data bytes (# of DataBytes, = 2004/2005 in the example)

<meas value x> 4-byte floating point value

**Characteristics:** \*RST value: -  
SCPI: conforming

The trace data is transferred in the current format (corresponding to the command FORMat ASCII|REAL). The device-internal trace memory is addressed using the trace names 'TRACE1' to 'TRACE3'.

The transfer of trace data from the control computer to the instrument takes place by indicating the trace name and then the data to be transferred. In ASCII format, this data consists of values separated by commas. If the transfer takes place using the REAL format (REAL,32), the data is transferred in block format.

The parameter of the query is the trace name TRACE1 to TRACE3, it indicates which trace memory will be read out.

Saving and recalling trace data together with the device settings to/from the device-internal hard disk or to/from a floppy is controlled via the commands "MMEMory:STORe:STATe" and "MMEMory:LOAD:STATe", respectively. Trace data is selected with "MMEMory:SELEct[:ITEM]:ALL" or "MMEMory:SELEct[:ITEM]:TRACe". Trace data in ASCII format (ASCCII FILE EXPORT) is exported with the command "MMEM:STORe:TRACe".

The transfer format for the trace data depends on the instrument setting:  
501 (FSP) or 625 (FSU and FSQ) results are output in the unit selected for display.

**Note:** *With AUTO PEAK detector, only positive peak values can be read out.*

FORMAT REAL,32 is to be used as format for binary transmission.

## TRIGger Subsystem

The trigger subsystem is used to synchronize instrument actions with events. It is thus possible to control and synchronize the start of a sweep. An external trigger signal can be applied to the connector at the rear panel of the instrument.

COMMAND	PARAMETERS	UNIT	COMMENT
TRIGger<1 2> [:SEquence] :SOURce	IMMediate   EXTernal   VIDeo   IFPower   RFPower   TV   AF   AM   FM		TV, RFPOWER only with option FSP-B6 AF with option FS-K7
:LEVel			
:AM	<numeric_value>	DBM	Option FS-K7 FM demodulator
:FM	<numeric_value>	HZ	Option FS-K7 FM demodulator
:IFPower	<numeric_value>	DBM	without Option FS-K7 FM Demodulator
:RFPower	<numeric_value>	DBM	Option FSP-B6 TV and RF trigger
:VIDeo	<numeric_value>	PCT	
:HOLDoff	<numeric_value>	S	
:SLOPe	POSitive NEGative	--	

**TRIGger<1|2>[:SEquence]:SOURce** IMMediate | EXTernal | VIDeo | IFPower | RFPower | TV | AF | AM | AMR | FM | PM

This command selects the trigger source for the start of a sweep:

**Notes:** *This command is not available during GSM measurements. The trigger source selection has to be done with the command TRIGger<1|2>[:SEquence]:SYNChronize:ADJust.*

*The selection of RFPower and TV is only possible with option FSP-B6 (TV and RF-Trigger).*

**Parameters:**

- IMMediate = Automatic triggering of the next measurement at the end of the previous one. The parameter corresponds to the FREE RUN setting.
- EXTernal = The next measurement is triggered by the signal at the external trigger input
- VIDeo = The next measurement is triggered by the detection of a signal at the video filter output. VIDeo cannot be selected if the FM demodulator is active.
- IFPower = The next measurement is triggered by the detection of a signal at the instrument IF (10 MHz bandwidth).
- RFPower= The next measurement is triggered by the detection of a signal at the instrument RF (80 MHz bandwidth).
- TV= The next measurement is triggered by the detection of a TV signal according to the settings of the TRIGger:SEquence:VIDeo-subsystem. TV cannot be selected if the FM demodulator is active.

AF =	The next measurement is triggered on detection of an FM modulated signal (equivalent to 'FM')
AMR =	The next measurement is triggered on detection of an audio signal after AM demodulation
AM =	The next measurement is triggered on detection of an RF signal in the time domain.
PM =	The next measurement is triggered on detection of an audio signal after PM demodulation

**Note:** For triggering with the AF, AM and FM trigger sources to be successful, the measurement time must cover at least 5 periods of the audio signal.

**Example:** "TRIG:SOUR EXT" Select the external trigger input as source for the trigger signal

**Characteristics:** \*RST value: IMMEDIATE  
SCPI: conforming

#### TRIGger<1|2>[:SEQUENCE]:LEVel:AM[:ABSolute] -100...+30dBm

This command sets the level when AM modulated signals are used as trigger source.

**Note:** For triggering with the AF, AM and FM trigger sources to be successful, the measurement time must cover at least 5 periods of the audio signal.

**Example:** "TRIG:LEV:AM -30 dBm" Set the AM trigger threshold to -30 dBm

**Characteristics:** \*RST value: -20 dBm  
SCPI: device-specific

#### TRIGger<1|2>[:SEQUENCE]:LEVel:AF -10...+10MHz

#### TRIGger<1|2>[:SEQUENCE]:LEVel:FM -10...+10MHz

This command sets the level when FM modulated signals are used as trigger source.

**Example:** "TRIG:LEV:AM 10 kHz" Set the FM trigger threshold to 10 kHz

**Characteristics:** \*RST value: 0 Hz  
SCPI: device-specific

#### TRIGger<1|2>[:SEQUENCE]:LEVel:PM -1000...+1000RAD

This command sets the phase when PM-modulated signals are used as a trigger source.

**Note:** For triggering with the AF, AM, AMR, PM and FM trigger sources to be successful, the measurement time must cover at least five periods of the audio signal

**Example:** "TRIG:LEV:PM 1.2 RAD" Set the PM trigger threshold to 1.2 rad

**Characteristics:** \*RST value: 0 RAD  
SCPI: device-specific

**TRIGger<1|2>[:SEQuence]:LEVel:IFPower -30...-10DBM**

This command sets the level for the IF power trigger source.

**Example:** "TRIG:LEV:IFP -20DBM"

**Characteristics:** \*RST value: -20 DBM  
SCPI: device-specific

**TRIGger<1|2>[:SEQuence]:LEVel:RFPower -50...-10DBM**

This command sets the level for the RF power trigger source.

**Example:** "TRIG:LEV:RFP -20DBM"

**Characteristics:** \*RST value: -20 DBM  
SCPI: device-specific

This command is only available in conjunction with option TV and RF-Trigger FSP-B6.

**TRIGger<1|2>[:SEQuence]:HOLDoff -100...+100s**

This command defines the length of the trigger delay.

**Example:** "TRIG:HOLD 500us"

**Characteristics:** \*RST value: 0s  
SCPI: conforming

**TRIGger<1|2>[:SEQuence]:SLOPe POSitive|NEGative**

This command selects the slope of the trigger signal. The selection of the trigger slope is valid for all trigger signal sources.

**Example:** "TRIG:SLOP NEG"

**Characteristics:** \*RST value: POSitive  
SCPI: conforming

### UNIT Subsystem

The UNIT subsystem defines the units of the parameters to be set and measurement results.

COMMAND	PARAMETERS	UNIT	COMMENT
UNIT :ANGLE	DEG   RAD		

**UNIT:ANGLE** DEG | RAD

This command selects the unit for angles.

**Example:** "UNIT:ANGL DEG"

**Characteristics:** \*RST value: RAD  
SCPI: conforming

## Table of Softkeys and Hotkeys including Assignment of Remote-Control Commands

This chapter contains the assignment of the remote-control commands to those softkey menus that differ from the base unit with regard to the FM demodulator option. The operating manual of the base unit covers the assignment of the unchanged menus.

### FM Demodulator Main Menu

FM DEMOD	
FM DEMOD ON OFF	INST:SEL ADEM INST:NSEL 3
RESULT DISPLAY	---
FM	CALC:FEED 'XTIM:FM'
RM	CALC:FEED 'XTIM:PM'
AM	CALC:FEED 'XTIM:AM:REL'
RF POWER	CALC:FEED 'XTIM:RFP'
RF SPECTRUM	CALC:FEED 'XTIM:SPECTRUM'
AF SPECTRUM	CALC:FEED 'XTIM:FM:AFSP' CALC:FEED 'XTIM:PM:AFSP' CALC:FEED 'XTIM:AM:REL:AFSP' CALC:FEED 'XTIM:RFP:AFSP'
SELECT TRACE	---
DIAGRAM FULL SIZE	DISP:WIND:SIZE LARG
RANGE	---
DEVIATION PER DIV	DISP:WIND:TRAC:Y:PDIV 50kHz
REFERENCE POSITION	DISP:WIND:TRAC:Y:RPOS 50PCT
REFERENCE VALUE	DISP:WIND:TRAC:Y:RVAL 0HZ
AF COUP AC DC	SENS:ADEM:AF:COUP DC
ZERO PHASE REF POS	SENS:ADEM:PM:RPO:X 10us



DEVIATION LIN LOG	DISP:WIND:TRAC:Y:SPAC LOG
DB PER DIV	DISP:WIND:TRAC:Y:PDIV 5DB
PHASE WRAP ON OFF	CALC:FORM PHAS
UNIT	---
PM UNIT RAD DEG	UNIT:ANGL DEG
MAX DISP RF POWER	DISP:WIND:TRAC:Y:RVAL 10 DBM
RANGE LINEAR	
RANGE LINEAR %	DISP:WIND:TRAC:Y:SPAC LIN
RANGE LINEAR DB	DISP:WIND:TRAC:Y:SPAC LDB
RANGE LOG MANUAL	DISP:WIND:TRAC:Y:SPAC LOG DISP:WIND:TRAC:Y:SCALE <num_value>
RF POWER LOG LIN	DISP:WIND:TRAC:Y:SPAC LOG
RF POWER PER DIV	DISP:WIND:TRAC:Y:PDIV 10 DB
FREQUENCY SPAN	ADEM:SPEC:SPAN 5 MHz
RES BW	ADEM:SPEC:BAND:RES 10 kHz
DEMOD BW	SENS:BAND:DEM 10MHz
MEAS TIME	SENS:ADEM:MTIM 62.5US ..... SENS:SWE:TIME 62.5US
ZOOM	SENS:ADEM:ZOOM ON ..... SENS:ADEM:ZOOM:START 30US

### FREQ Key

CENTER	[SENSe:]FREQuency:CENTer <num_value>
CF- SREPSIZE	
0.1 * SPAN	[SENSe:]FREQuency:CENTer:STEP:LINK SPAN; [SENSe:]FREQuency:CENTer:STEP:LINK:FACTor 10PCT
0.5 * SPAN	[SENSe:]FREQuency:CENTer:STEP:LINK SPAN; [SENSe:]FREQuency:CENTer:STEP:LINK:FACTor 50PCT

X * SPAN	[SENSe:]FREQuency:CENTer:STEP:LINK SPAN; [SENSe:]FREQuency:CENTer:STEP:LINK:FACTor <num_value>
0.1 * RBW	[SENSe:]FREQuency:CENTer:STEP:LINK RBW; [SENSe:]FREQuency:CENTer:STEP:LINK:FACTor 10PCT
0.5 * RBW	[SENSe:]FREQuency:CENTer:STEP:LINK RBW; [SENSe:]FREQuency:CENTer:STEP:LINK:FACTor 50PCT
X * RBW	[SENSe:]FREQuency:CENTer:STEP:LINK RBW; [SENSe:]FREQuency:CENTer:STEP:LINK:FACTor <num_value>
= CENTER	without function in IEC/IEEE-bus mode
= MARKER	without function in IEC/IEEE-bus mode
MANUAL	[SENSe:]FREQuency:CENTer:STEP <num_value>
AF CENTER	[SENSe:]ADEMod:AF:CENTer <num_value>
AF START	[SENSe:]FREQuency:START <num_value>
AF STOP	[SENSe:]FREQuency:STOP <num_value>

**SPAN Key**

AF SPAN	[SENSe:]ADEMod:AF:SPAN <num_value>
FREQUENCY SPAN	[SENSe:]ADEMod:SPECTrum:SPAN:ZOOM
AF FULL SPAN	[SENSe:]ADEMod:AF:SPAN FULL
FULL SPAN	[SENSe:]ADEMod:SPECTrum:SPAN:ZOOM MAX
DEMODO BW	SENS:BAND:DEM 10MHz
MEAS TIME	SENS:ADEM:MTIM 62.5US ..... SENS:SWE:TIME 62.5US

**AMPT Key**

REF LEVEL	DISPlay[:WINDow<1 2>]:TRACe<1...3>:Y[:SCALe]:RLEVel <num_value>
RANGE LINEAR	
RANGE LINEAR %	DISPlay[:WINDow<1 2>]:TRACe<1...3>:Y:SPACing LINear

RANGE LINEAR DB	DISPlay[:WINDow<1 2>]:TRACe<1...3>:Y:SPACing LDB
RANGE LOG 100 dB	DISPlay[:WINDow<1 2>]:TRACe<1...3>:Y:SPACing LOGarithmic; DISPlay[:WINDow<1 2>]:TRACe<1...3>:Y[:SCALE] 100 dB
RANGE LOG MANUAL	DISPlay[:WINDow<1 2>]:TRACe<1...3>:Y:SPACing LOGarithmic; DISPlay[:WINDow<1 2>]:TRACe<1...3>:Y[:SCALE] <num_value>
RF ATTEN MANUAL	INPut:ATTenuation <num_value>
RF ATTEN AUTO	INPut:ATTenuation:AUTO ON
REF LEVEL POSITION	DISPlay[:WINDow<1 2>]:TRACe<1...3>:Y[:SCALE]:RPosition <num_value>
REF LEVEL OFFSET	DISPlay[:WINDow<1 2>]:TRACe<1...3>:Y[:SCALE]:RLEVEL:OFFSet <num_value>
EL ATTEN AUTO	INPut:EATT:AUTO ON (only with option FSP-B25)
EL ATTEN MANUAL	INPut:EATT <num_value> (only with option FSP-B25)
EL ATTEN OFF	INPut:EATT:STATE OFF (only with option FSP-B25)
RF INPUT 50Ω 75Ω	INPut:IMPedance 50   75

**BW Key**

RES BW	ADEM:SPEC:BAND:RES 10 kHz
IF BW AUTO	BAND:RES:AUTO ON
IF BW MANUAL	BAND:RES 1 MHz
DEMODO BW	SENS:BAND:DEM 10MHz
MEAS TIME	SENS:ADEM:MTIM 62.5US ..... SENS:SWE:TIME 62.5US

## TRIG Key

FREE RUN	TRIG:SOUR IMM
DEMODO SIGNAL	---
FM SIGNAL	TRIG:SOUR FM TRIG:LEV:FM 10 kHz
PM SIGNAL	TRIG:SOUR PM TRIG:LEV:PM -1 rad
AM SIGNAL	TRIG:SOUR AMR TRIG:LEV:AM:REL 30 PCT
RF POWER SIGNAL	TRIG:SOUR AM TRIG:LEV:AM:ABS -30 dBm
EXTERN	TRIG:SOUR EXT SWE:EGAT:SOUR EXT
IF POWER	TRIG:SOUR IFP TRIG:LEV:IFP -20 dBm
RF POWER	TRIG:SOUR RFP TRIG:LEV:RFP -40 dBm
TRIGGER OFFSET	TRIG:HOLD 10US
POLARITY POS NEG	TRIG:SLOP POS

## MKR Key

MARKER 1..4	CALCulate<1 2>:MARKer<1...4>[:STATE] ON   OFF; CALCulate<1 2>:MARKer<1...4>:X <numeric value>; CALCulate<1 2>:MARKer<1...4>:Y? CALCulate<1 2>:DELTamarker1[:STATE] ON   OFF; CALCulate<1 2>:DELTamarker<1...4>:X <numeric value>; CALCulate<1 2>:DELTamarker<1...4>:Y?
MARKER NORM DELTA	CALCulate<1 2>:DELTamarker<1...4>[:STATE] ON   OFF;
ALL MARKER OFF	CALCulate<1 2>:MARKer<1...4>:AOFF CALCulate<1 2>:DELTamarker<1...4>:AOFF

## MKR ⇒ Key

SELECT MARKER	without function in IEC/IEEE-bus mode
PEAK	CALCulate<1 2>:MARKer<1...4>:MAXimum[:PEAK] CALCulate<1 2>:DELTamarker<1...4>:MAXimum[:PEAK]
REF LEVEL = MKR LVL	CALCulate<1 2>:MARKer<1...4>:FUNCTION:REFERENCE

NEXT PEAK	CALCulate<1   2>:MARKer<1...4>:MAXimum:NEXT CALCulate<1   2>:DELTamarker<1...4>:MAXimum:NEXT
NEXT PEAK RIGHT	CALCulate<1   2>:MARKer<1...4>:MAXimum:RIGHT CALCulate<1   2>:DELTamarker<1...4>:MAXimum:RIGHT
NEXT PEAK LEFT	CALCulate<1   2>:MARKer<1...4>:MAXimum:LEFT CALCulate<1   2>:DELTamarker<1...4>:MAXimum:LEFT
MKR-> TRACE	CALCulate<1   2>:MARKer<1...4>:TRACe <numeric value> CALCulate<1   2>:DELTamarker<1...4>:TRACe <numeric value>
MIN	CALCulate<1   2>:MARKer<1...4>:MINimum[:PEAK] CALCulate<1   2>:DELTamarker<1...4>:MINimum[:PEAK]
MIN NEXT	CALCulate<1   2>:MARKer<1...4>:MINimum:NEXT CALCulate<1   2>:DELTamarker<1...4>:MINimum:NEXT
NEXT MIN RIGHT	CALCulate<1   2>:MARKer<1...4>:MINimum:RIGHT CALCulate<1   2>:DELTamarker<1...4>:MINimum:RIGHT
PEAK EXCURSION	CALCulate<1   2>:MARKer<1...4>:PEXCursion <num_value>

### MKR FCTN Key

SELECT MARKER	without function in IEC/IEEE-bus mode
PEAK	CALCulate<1   2>:MARKer<1...4>:MAXimum[:PEAK] CALCulate<1   2>:DELTamarker<1...4>:MAXimum[:PEAK]
MKR-> TRACE	CALCulate<1   2>:MARKer<1...4>:TRACe <numeric value> CALCulate<1   2>:DELTamarker<1...4>:TRACe <numeric value>



## 4 Index

**Note:** The softkeys are listed alphabetically under the keyword "Softkey".

<b>C</b>		FM DEMOD ON/OFF.....	2.2
Command		FM SIGNAL .....	2.21, 2.22
description.....	3.1	FREE RUN .....	2.21, 3.47
<b>E</b>		FREQUENCY SPAN .....	2.16
Ext Trig/Gate In input.....	2.22	FULL SIZE DIAGRAM .....	2.10
<b>F</b>		FULL SPAN .....	2.17
Free-running Sweep.....	2.21	HARDWARE INFO .....	3.1
<b>H</b>		IF BW AUTO.....	2.19
Hotkey		IF BW MANUAL.....	2.19
SPECTRUM.....	3.12	IF POWER.....	2.22, 3.47
<b>I</b>		IFPower .....	3.49
Input		MARKER 1...4 .....	3.2, 3.5
Ext Trig/Gate In.....	2.22	MAX DISP RF POWER .....	2.14
<b>K</b>		PEAK EXCURSION.....	3.5
Key		PHASE WRAP ON/OFF .....	2.13
TRIG .....	2.21	PM .....	2.7
<b>O</b>		PM UNIT RAD/DEG.....	2.13
Offset		POLARITY POS/NEG.....	2.23, 3.49
Trigger.....	2.23	QP RBW UNCOUPLED .....	3.43
<b>P</b>		RANGE .....	2.11
Polarity		RANGE LIN % dB.....	3.11
Trigger Slope .....	2.23	RANGE LINEAR.....	2.14, 3.11
<b>S</b>		RANGE LINEAR %.....	2.14
Softkey		RANGE LINEAR dB.....	2.14
AF CENTER.....	2.15	RANGE LOG 100 dB.....	3.11
AF COUP AC/DC.....	2.12	RANGE LOG MANUAL .....	2.14, 3.11
AF FULL SPAN.....	2.16	REF LEVEL POSITION .....	3.10
AF POWER LOG/LIN.....	2.14	REFERENCE POSITION.....	2.11
AF SPAN.....	2.16	REFERENCE VALUE.....	2.12
AF SPECTRUM .....	2.10	RES BW.....	2.19
AF START.....	2.15	RESULT DISPLAY .. 2.5, 2.6, 2.8, 2.22, 2.23,	
AF STOP.....	2.15	.....	3.47
AM.....	2.7, 2.22	RF POWER PER DIV .....	2.14, 2.22
DB PER DIV.....	2.13	RFPower .....	3.49
DEVIATION LIN/LOG .....	2.13	SELECT TRACE.....	2.10
DEVIATION PER DIV .....	2.11	SPECTRUM.....	2.9
EXTERN .....	2.22, 3.47	TRIGGER OFFSET .....	2.23, 3.49
FM.....	2.6	VIDEO.....	3.47
FM DEMOD.....	2.1	ZERO PHASE REF POS.....	2.13
		Softkey GRID MIN LEVEL .....	3.11
		Sweep	
		free-running .....	2.21
		<b>T</b>	
		Trigger	
		extern.....	2.22
		free-running .....	2.21
		IF Power .....	2.22
		Offset.....	2.23
		RF Power.....	2.22, 2.23
		Slope.....	2.23