

THE PROCESS OF OPENING THE PACKAGING



Before opening the packaging, check the »shock sensor«, located on the outside of the packaging. If the indicator is coloured bright red, DO NOT OPEN THE PACKAGING, but immediately inform your transport agent!


1. Find the serial number on the front side of the wooden box.



2. Cut the plastic strips and remove the wooden lid. Remove wooden panel from each sides. Open the plastic foil. Push the edge of the foil under the pallet.



3. Remove all (4 pieces) plastic holders.

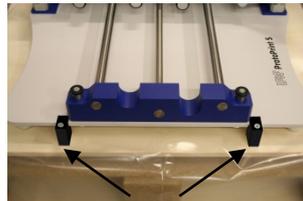

4. Finally remove the plastic foil around the frame and handle and take out the items enclosed with the printer (User Manual, packing list, accessories etc.).



5. Read instructions for use.

After removing the packaging inspect the general state of the device and equipment, and check the accordance of the forwarded package with the enclosed packaging certificate. In the event of damage immediately inform the transport agent.



The weight of the device is 30kg
If not handled correctly spinal injuries can occur.



For further instructions, see chapter 6. INSTALLATION in the USER MANUAL!