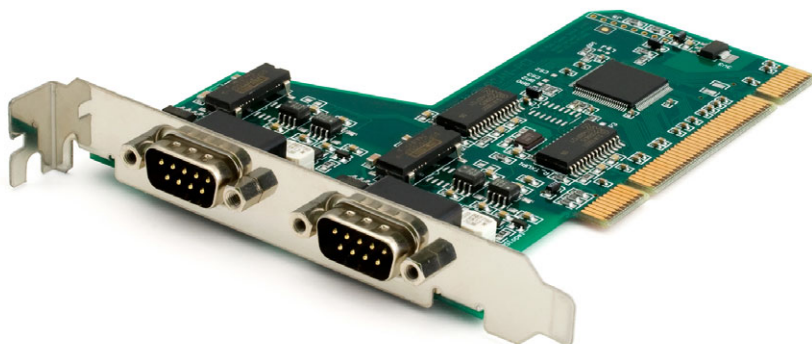


PCAN-PCI

PCI to CAN Interface

User Manual



Products taken into account

Product Name	Model	Item Number
PCAN-PCI Single Channel	One CAN channel	IPEH-002064
PCAN-PCI Dual Channel	Two CAN channels	IPEH-002065
PCAN-PCI Single Channel opto-decoupled	One CAN channel, galvanic isolation for CAN connection	IPEH-002066
PCAN-PCI Dual Channel opto-decoupled	Two CAN channels, galvanic isolation for CAN connections	IPEH-002067

The cover picture shows the product PCAN-PCI Dual Channel opto-decoupled. Other product versions have an identical form factor but vary in equipment.

Product names mentioned in this manual may be the trademarks or registered trademarks of their respective companies. They are not explicitly marked by "™" and "®".

© 2009 PEAK-System Technik GmbH

PEAK-System Technik GmbH
Otto-Roehm-Strasse 69
64293 Darmstadt
Germany

Phone: +49 (0)6151 8173-20
Fax: +49 (0)6151 8173-29

www.peak-system.com
info@peak-system.com

Issued 2009-03-20

Contents

1	Introduction	4
1.1	Properties at a Glance	4
1.2	System Requirements	5
1.3	Scope of Supply	5
2	Installation	6
2.1	Installing the Software and the PCAN-PCI Card	6
2.2	Connecting the CAN Bus	8
2.3	Supplying External Devices via the CAN Connector	8
3	Software	11
3.1	CAN Monitor PCAN-View for Windows	11
3.2	Linking Own Programs with PCAN-Light	13
4	Technical Specifications	14
Appendix A	CE Certificate	16
Appendix B	Dimension Drawing	17
Appendix C	Quick Reference	18

1 Introduction

The PCAN-PCI card provides one or two CAN channels in computers with PCI slots. Software interfaces exist for different operating systems, so programs can easily access a connected CAN bus.



Tip: At the end of this manual (Appendix C) you can find a [Quick Reference](#) with brief information about the installation and operation of the PCAN-PCI card.

1.1 Properties at a Glance

- └ Extension card for PCI slot
- └ 1 or 2 High-speed CAN channels (ISO 11898-2)
- └ CAN transfer rates up to 1 Mbit/s
- └ CAN specifications 2.0A and 2.0B applicable
- └ CAN connection 9-pin D-Sub male, pin assignment according to CiA recommendation 102 DS
- └ Galvanic isolation up to 500 V for the CAN interface (only opto-decoupled versions), separate for each CAN connector
- └ 5-Volt power supply at the CAN connector connectible by solder bridges, e.g. for external bus converter
- └ Device drivers and programming interfaces for operating systems Windows (from 2000 onwards) and Linux, for older versions and other operating systems on request



Note: This manual describes the use of the PCAN-PCI card with Windows. You can find device drivers for Linux and the corresponding application information on PEAK-System's website under www.peak-system.com/linux.

1.2 System Requirements

The following prerequisites must be given, so that the PCAN-PCI card can be used properly:

- └ A vacant PCI slot in the computer
- └ Operating system Windows (Vista 32-bit, XP SP2, 2000 SP4) or Linux (incl. 64-bit versions)

1.3 Scope of Supply

The scope of supply normally consists of the following parts:

- └ PCAN-PCI card
- └ CD with software (drivers, utilities), programming examples, and documentation

2 Installation

This chapter deals with the software setup for the PCAN-PCI card under Windows, the installation in the computer, and the connection of a CAN bus.

2.1 Installing the Software and the PCAN-PCI Card

We recommend that you setup the driver before installing the PCAN-PCI card into the computer.

▶ Do the following to install the driver:

1. Make sure that you are logged in as user with administrator privileges (not needed for normal use of the PCAN-PCI card later on).
2. Insert the supplied CD into the appropriate drive of the computer. Usually a navigation program appears a few moments later. If not, start the file `Intro.exe` from the root directory of the CD.
3. On the page **English > Drivers** activate the entry **PCAN-PCI**.
4. Click on **Install now**. The setup program for the driver is executed.
5. Follow the instructions of the setup program.



Tip: If you don't want to install the CAN monitor PCAN-View for Windows onto hard disk together with the driver, you have the option to start the program later directly from CD without prior installation.

- ▶ Do the following to install the PCAN-PCI card in the computer:
 1. Shut down the computer.
 2. Disconnect the computer from the power supply.
 3. Open the computer's casing.
 4. Insert the PCAN-PCI card into an empty PCI slot. For details please refer to the documentation of the computer.
 5. Close the computer's casing.
 6. Reconnect the power supply of the computer.
- ▶ Do the following to complete the initialization:
 1. Turn on the computer and start Windows. Make sure again that you are logged in as user with administrator privileges.
 2. Windows reports that new hardware has been detected and possibly starts an installation wizard. This depends on the used Windows version. If applicable, confirm the steps for driver initialization.
 3. Afterwards you can work as user with restricted rights again.

After the driver has been successfully set up you can find the entry "PEAKCAN PCI-card" in the branch "CAN-Hardware" of the Windows Device Manager.


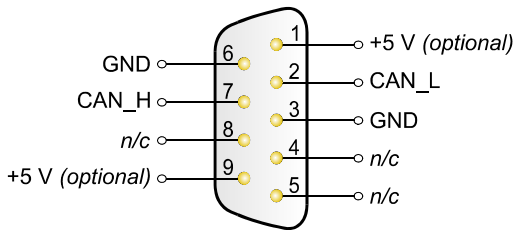


Figure 1: Representation of the PCAN-PCI card in the Windows Device Manager

2.2 Connecting the CAN Bus

A High-speed CAN bus (ISO 11898-2) is connected to the 9-pin D-Sub connector. The pin assignment corresponds to the CiA recommendation 102 DS.



n/c = not connected

Figure 2: Pin assignment of High-speed CAN connection
(view onto a male connector on the PCAN-PCI card)

With the pins 1 and 9 devices with low power consumption (e.g. bus converters) can be directly supplied via the CAN connector. At delivery these pins are not assigned. You can find a detailed description in the following section 2.3.



Tip: You can connect a can bus with a different transmission standard via a bus converter. PEAK-System offers different bus converter modules (e.g. PCAN-TJA1054 for a Low-speed CAN bus according to ISO 11898-3).

2.3 Supplying External Devices via the CAN Connector

A 5-Volt supply can optionally be routed to pin 1 and/or pin 9 of a D-Sub connector by setting solder bridges on the PCAN-PCI card (independently for each connector on the Dual Channel versions). Thus devices with low power consumption (e.g. bus converters) can be directly supplied via the CAN connector.

When using this option the 5-Volt supply is connected to the power supply of the computer and is not fused separately. The opto-decoupled versions of the card contain an interconnected DC/DC converter. Therefore the current output is limited to about 50 mA.



Attention! Risk of short circuit! If the option described in this section is activated, you may only connect or disconnect CAN cables or peripheral systems (e.g. bus converters) to or from the PCAN-PCI card while the computer is de-energized.

Set the solder bridge(s) on the PCAN-PCI card according to the desired settings. During this procedure take especially care not to produce unwanted short circuits on the card.

The following Figure 3 shows the positions of the solder fields on the PCAN-PCI card; the table below contains the possible settings.

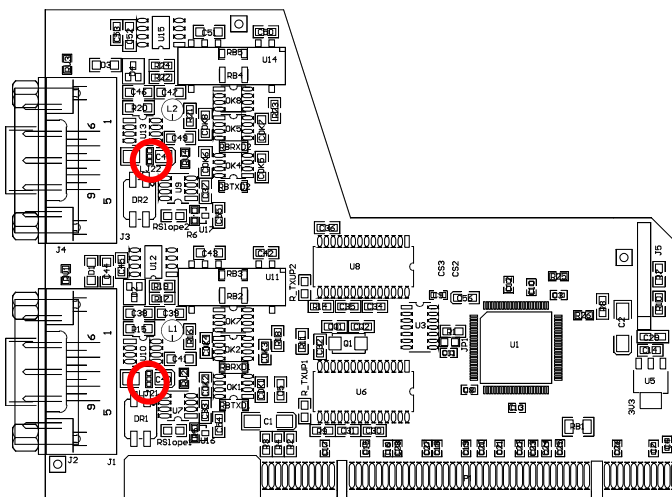






Figure 3: PCAN-PCI card, LJ21 (lower marker) and LJ22 (upper marker)

5-Volt supply →	None	Pin 1	Pin 9	Pin 1 + Pin 9
LJ21 (CAN channel 1) / LJ22 (CAN channel 2)				

3 software

This chapter deals with the provided software and the software interface to the PCAN-cPCI card.

3.1 CAN Monitor PCAN-View for Windows

PCAN-View for Windows is a simple CAN monitor for viewing and transmitting CAN messages.

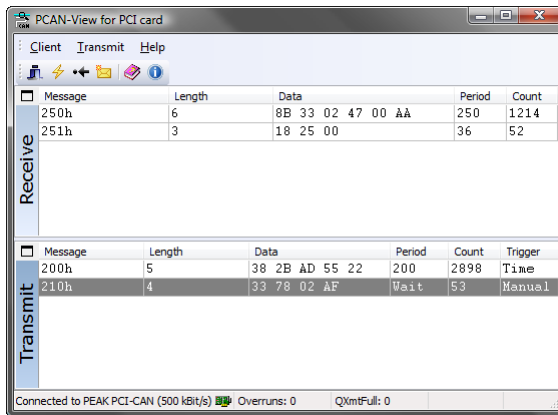


Figure 4: The main window of PCAN-View for Windows

Starting PCAN-View

You can start PCAN-View in two ways:

- If PCAN-View is already installed on the hard disk, open the Windows Start menu, go to **Programs > PCAN-Hardware**, and select the entry **PCAN-View PCI**.

- In order to start directly from the supplied CD without prior installation use the navigation program (**Intro.exe**), go to **English > Tools**, and in the entry **PCAN-View for PCI** click on **Start**.

A dialog box for the selection of the CAN hardware as well as the setting of the CAN parameters appears after the program start.

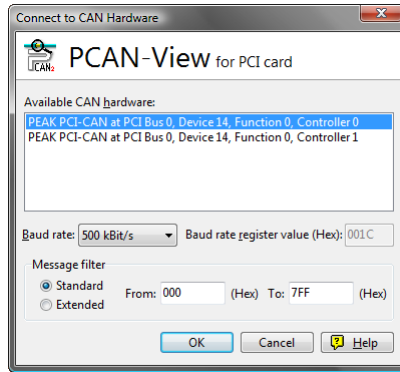


Figure 5: Selection of the CAN specific hardware and parameters

From the list “Available CAN hardware” select the CAN channel to be used (with Dual Channel versions only). Note that the count of the CAN controllers starts at 0, i.e. the CAN controller 0 is assigned to CAN channel 1.

As a rule you can leave the remaining preset values and confirm the dialog box with **OK**.

You can find further information about the use of PCAN-View in the help which you can invoke in the program via the menu **Help** or the **F1** key.

3.2 Linking Own Programs with PCAN-Light

On the provided CD you can find files for software development in the directory branch `/Develop/Windows`. They exclusively serve the linking of own programs to hardware by PEAK-System with the help of the installed device driver under Windows.

Further more the CD-ROM contains header files and examples for creating own applications in conjunction with the PCAN-Light drivers. Please read the detailed documentation of the interface (API) in each header file.

You can find further information in the text and help files (file name extensions `.txt` and `.chm`).

Notes about the License

Device drivers, the interface DLL, and further files needed for linking are property of the PEAK-System Technik GmbH and may be used only in connection with a hardware component purchased from PEAK-System or one of its partners. If a CAN hardware component of third party suppliers should be compatible to one of PEAK-System, then you are not allowed to use or to pass on the driver software of PEAK-System.

PEAK-System assumes no liability and no support for the PCAN-Light driver software and the necessary interface files. If third party suppliers develop software based on the PCAN-Light driver and problems occur during use of this software, please, consult the software provider. To obtain development support, you need to own a PCAN-Developer or PCAN-Evaluation version.

4 Technical specifications

Connectors

Computer	PCI bus (Rev. 2.2), PC98, 32-bit bus width, for 3.3 V and 5 V systems
CAN	D-Sub (m), 9 pins Pin assignment according to CiA recommendation 102 DS Opto-decoupled versions: galvanic isolation up to 500 V (separate for each CAN channel)

CAN

Specification	ISO 11898-2 High-speed CAN (up to 1 Mbit/s) 2.0A (standard format) and 2.0B (extended format)
Controller	NXP (Philips) SJA1000T
Transceiver	NXP (Philips) PCA82C251

Supply

Current consumption	PCAN-PCI Single Channel: max. 150 mA PCAN-PCI Dual Channel: max. 280 mA PCAN-PCI Single Ch. opto-dec.: max. 260 mA PCAN-PCI Dual Ch. opto-dec.: max. 490 mA
---------------------	--

Measures

Size	PCB: 93 x 120 mm (3 11/16 x 4 3/4 inches) (H x W) See also dimension drawing in Appendix B on page 17
Weight	PCAN-PCI Single Channel: 54 g (1.9 oz.) PCAN-PCI Dual Channel: 63 g (2.2 oz.) PCAN-PCI Single Ch. opto-dec.: 55 g (1.9 oz.) PCAN-PCI Dual Ch. opto-dec.: 65 g (2.3 oz.)

Continued on the next page

Environment

Operating temperature	-40 - +85 °C (-40 - +185 °F)
Temperature for storage and transport	-40 - +125 °C (-40 - +257 °F)
Relative humidity	15 - 90 %, not condensing
EMC	EN 55024:2003-10 EN 55022:2007-04 EC directive 2004/108/EG

Appendix A CE Certificate

PCAN-PCI IPEH-002064/65/66/67 – EC Declaration of Conformity
PEAK-System Technik GmbH



Notes on the CE Symbol

The following applies to the PCAN-PCI products
IPEH-002064/65/66/67

EC Directive

This product fulfills the requirements of EC directive
2004/108/EG on "Electromagnetic Compatibility" and is
designed for the following fields of application as per the
CE marking:

Electromagnetic Immunity

DIN EN 55024, Publication date: 2003-10
Information technology equipment; immunity characteristics - Limits and methods of
measurement (IEC/CISPR 24:1997, modified + A1:2001 + A2:2003);
German version EN 55024:1998 + A1:2001 + A2:2003

Electromagnetic Emission

DIN EN 55022, Publication date: 2007-4
Information technology equipment - Radio disturbance characteristics - Limits and methods
of measurement (IEC/CISPR 22:2005, modified);
German version EN 55022:2006

Declarations of Conformity

In accordance with the above mentioned EU directives,
the EC declarations of conformity and the associated
documentation are held at the disposal of the competent
authorities at the address below:

PEAK-System Technik GmbH

Mr. Wilhelm
Otto-Roehm-Strasse 69
64293 Darmstadt
Germany

Phone: +49 (0)6151 8173-20
Fax: +49 (0)6151 8173-29
E-mail: info@peak-system.com

A handwritten signature in black ink, appearing to be "Uwe W. M.", written in a cursive style.

Signed this 5th day of February 2009

FRONT VIEW

95.5mm

0.38mm CHAMFER TYP 4 PLCS

0.79mm R TYP

112.42mm

97.92mm

96.06mm

107.3mm

48.39mm

43.31mm

50.37mm

37.67mm

49.66mm

47.8mm

33.27mm

SEE DETAIL A

7.5mm

0

-4.8mm

87.76mm

85.4mm

DETAIL A

20°

0.254mm

+0.127mm

-0.254mm

0.8mm

+0.254mm

-0.381mm

17

Appendix C Quick Reference

Software/Hardware Installation under windows

Before installing the PCAN-PCI card into the computer please set up the corresponding software package from the supplied CD (with administrator privileges). Afterwards, insert the PCAN-PCI card into a vacant PCI slot of the switched off (de-energized) computer. At the next start of Windows the PCAN-PCI card is recognized by Windows and the driver is initialized. After the driver has been successfully installed you can find the entry "PEAKCAN PCI-card" in the branch "CAN-Hardware" of the Windows Device Manager. Afterwards, you may also work as user with restricted rights.

Getting Started under windows

Run the CAN monitor PCAN-View from the Windows Start menu as a sample application for accessing the PCAN-PCI card. You can use the preset parameters for initialization of the PCAN-PCI card without changes (select the desired CAN channel, when using the Dual Channel version).

High-speed CAN connector (D-Sub, 9 pins)

